



## User Manual Keylock 6600/6600A

### BASIC INFORMATION

The original master password is "11111111".

#### Important:

Please modify the master password during first time use.

All User ID	: 3 digit numbers
All Passwords	: 8 digit numbers
User Capacity	: Fingerprint: 75, Password: 78 (Keylock 6600) Fingerprint: 150, Password: 78 (Keylock 6600A)

**To unlock**, slide up the front cover. The default unlocking mode is fingerprint. Other mode available is ID/Password.

#### Indication beep:

Long beep	- Success
Short beep	- Press button
Short & repeating beep	- Low battery alert
Musical tone	- Unlocking alert

#### ENGLISH



#### CAUTION

Reset button can be used to erase all unlocking passwords and fingerprints and it will reset the lock to its original factory mode.

### 1 MODIFICATION OF ID / PASSWORD

#### To change master password

- 1 Press 0
- 2 Press \*
- 3 Enter Original Master Password
- 4 Enter New Password
- 5 Enter New Password
- 6 Press #

#### To change user password

- 1 Press 0
- 2 Press \*
- 3 Enter Old Password
- 4 Enter New Password
- 5 Enter New Password
- 6 Press #

### 2 ENROLLMENT OF PIN / PASSWORD USER

- 1 Press 1
- 2 Press \*
- 3 Enter Master Password
- 4 Enter 3 digits user ID
- 5 Enter User Password
- 6 Enter User Password
- 7 Press #

#### For example:

To enroll a user with ID NO. 123 and password 12312312, please:

- 1 Press 1
- 2 Press \*
- 3 Enter Master Password
- 4 123
- 5 12312312
- 6 12312312
- 7 Press #

### 3 ENROLLMENT OF FINGERPRINT USER

#### User enrollment by ID number

- 1 Press 1
- 2 Press #
- 3 Enter Master Password
- 4 Enter User ID
- 5 Press #
- 6 Place Fingerprint

#### To add another user

You can add a user when you hear a long beep after every enrollment. Repeat from

- 1 Enter User ID
- 2 Press #
- 3 Place Fingerprint

For example, to enroll one user after another.

- 1 Press 1
- 2 Press #
- 3 Enter Master Password
- 4 Press #
- 5 Place Fingerprint
- 6 Long beep indicating successful enrollment
- 7 Another user ID for new user
- 9 Press #
- 8 Place Fingerprint
- 10 Long beep indicating successful enrollment
- 11 Repeat

#### User enrollment not determined by user ID

- 1 Press 1
- 2 Press #
- 3 Enter Master password
- 4 Press #
- 5 Desired fingerprint

#### To add another random user

After long beep indicating successful enrollment, just place another fingerprint.

### 4 DELETION OF PIN / PASSWORD USER

#### Deletion by user ID

- 1 Press 2
- 2 Press \*
- 3 Enter Master Password
- 4 Enter User ID
- 5 Enter User ID
- 6 Press #

#### Deletion of all users

- 1 Press 3
- 2 Press \*
- 3 Enter Master Password
- 4 Press #

### 5 DELETION OF FINGERPRINT USER

#### Deletion of fingerprint user by user ID

- 1 Press 2
- 2 Press #
- 3 Enter Master Password
- 4 Enter User ID
- 5 Enter User ID
- 6 Press #

#### Deletion of all fingerprint user

- 1 Press 3
- 2 Press #
- 3 Enter Master Password
- 4 Press #

### 6 ENABLE / DISABLE VISITOR MODE

- 1 Press \*
- 2 Press \*
- 3 Enter Master Password
- 4 Press #

#### NOTE:

By setting the visitor mode, the door will be unlocked when the front cover is lifted up. Users don't need to verify fingerprint or password.

### 7 UNLOCKING OPERATION

#### Password

Press 8 digit password to verify the User ID.

#### Fingerprint

Place the enroll fingerprint on the sensor window. Wait for the successful indication beep.