



TimeTec Lift Control Panel BLE-16 Elevate Lift Technology through Smartphone Access

Demo Kit User Guide



To perform a demo with the demo kit and your iNeighbour, you must first setup a demo account by yourself. Inside the demo account, you must have at least one System Admin (you must login as System Admin to configure the system) and few resident accounts (you can sign in to the mobile app as a Resident). After everything is setup inside the iNeighbour account, follow steps below to add in the BLE 16 – Smart Lift demo kit.

28 09 24 MT Tures, 27 Feb 2018 DSCHSDAM2 NEXHBOURH000 + DECURITY VISITOR REFORT + E-BILLING + UT + MY ADOUNT + Werk 2 T + Distance Sime init 9 : 5 6 : Tuesday, 27 Sime init 2 BLE Lift Distance Distance Contacts Documents

Step 1 - Select IOT > BLE Lift.

Step 2

Make sure you already created building blocks in your iNeighbour account. Now select the block to manage lift (click the **Manage Lift** from the block section), for example BA (Building A).

DEC ENCOACTING	Access Rights				
Manage BLE	lift settings and access ri	ghts for all users here. Go to Manage L	evels to define the levels including comr	non area levels such as Lobby or Unc	+ ADD BLOCK
dedicated blo	Lift to configure lift settin ok for common areas, ins meTeo Lift Control Panel	gs and set user's permission at Access talled with BLE Lift. BLE-16 (i-Neighbour), click here for mo	Rights. Note: The blocks available in th	e list are taken from Manage Unit. Cl	ick Add Block if you have a
inclosed in a					
	m o	m o	ũ o	iii 0	1 10 10
	and o				
	A 4 Levels	BA 20 Levels	Block Mutiara 10 Levels	C 4 Levels	N NKK X
	A 4 Levels Last Update:	BA 20 Levels <i>Last Update:</i>	Block Mutiara 10 Levels Last Update:	C 4 Levels Last Update:	NAMA NO
30/1	A 4 Levels Last Update: 1/-0001 08:00 AM	BA 20 Levels Last Update: 30/11/-0001 08:00 AM	Block Mutiara 10 Levels Last Update: 30/11/-0001 08:00 AM	C 4 Levels Last Update: 30/11/-0001 08:00 AM	A at
30/1	A 4 Levels Last Update: 1/-0001 08:00 AM	BA 20 Levels Last Ubdate: 30/11/-0001 05:00 AM	Block Mutiana 10 Levels Lest Undate: 30/11/-0001 08:00 AM	CC4 Levels Last Update: 30/11/-0001 08:00 AM	
30/1	A 4 Levels Last Update: V/-0001 08:00 AM	BA 20 Levels Last Update 30/11/-0001 08:00 AM	Block Mutiana 10 Levels Last Update: 30/11/-0001 08:00 AM	C 4 Levels Last Update: 30/11/-0001 08:00 AM	

Step 3

Click **Add BLE Lift** and system displays a setup page.



Step 4

Name the demo kit, for example "my demo kit – BLE 16 Lift Control".

Insert the **serial number** (attached to the BLE 16 lift demo kit) into the Serial number column, system detects the MAC address from server automatically.

Select the floors to match with the BLE 16 lift control buttons, for example 1st floor is represented by CH-1.

One BLE 16 consists of 16 buttons, which can support maximum 16 floors. You can select less than 16 buttons to ease your demo process.

ALC: Y	o Kit - BLE 18 Lift Cont	rol 1									
			0/50 - 1								
			U/SU character	5							
Total Lev	els: 20										
BLE-16 Ra	av Board 1										~
DEC TOTIO	ay board i										
🛱 BLE-1	6 Relay Board 1 Serial I	Number 2									
🛱 BLE-1	6 Relay Board 1 Mac Ac	ddress									
BLE-16 Rel	ay Board Configuarat		2	•	CHu3	3	•	CH - 4	4		
	5	 CH - 8 	6		CH - 7	7	•	CH - 8	8	•	
CH - 5		 CH - 10 	10	۲	CH - 11	11	•	CH - 12	12	•	
CH - 5 CH - 9	9										

Step 5

After saving the configuration, go to the **2nd tab (Access Rights)** to assign users and their accessible floor.

BLE Lift Setting Access Rights	
BA > Manage Lift View and configure the settings of the lift for this selected block. To add a lift, click on "Add BLE Lift", Please make sure that you have defined all the levels for this block at Manage Levels before proceeding with this step. To gogle off to disable the lift.	
Ne ELE UIT has been acced to this plockyet.	I
🗣 📽 🕙 Guide FAQs AppLock Bunting I-AD New Features Terms of Use Privacy Policy Guarantee SLA Library Lang	uage ,

Step 6

During demo, we suggest to use Master Admin account. Now select Master Admin and select the building (you shall select the same build as you selected in Step 1). Select the floors allow to access.



After you finished with the web setup, login to your mobile app to start to use.



© 2018 Timetec Cloud Sdn Bhd. All rights reserved • 012018