


# TimeTec BLE-16

## Smart Lift Controller

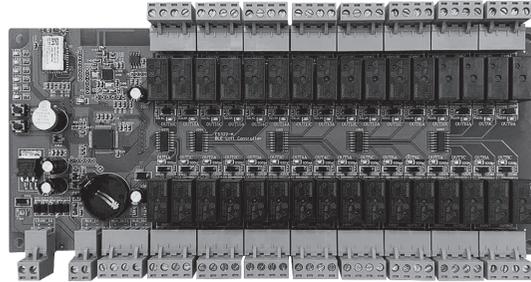

# Installation Guide

© 2019 Timetec Cloud Sdn Bhd. All rights reserved • 012019



 
**STEP • 1**  
Determine where you want to install TimeTec BLE-16

**RECOMMENDATIONS:**


- Install the device inside a lift car, near to the floor button controller to minimize the need of extra wiring.
- Install an on/off switch to turn off the power supply to the device. Power off to bypass the device, and the floor access function will be back to default operation, where user can press button at the lift button panel to access its desired floors.
- For a building with more than 16 floors, the installation requires more than one BLE16 relay boards. For example, a building with 30 floors will need 2 units of BLE 16 relay boards, where the first relay board will control access from Floor 1 to Floor 16, and the second relay board will control the access from Floor 17 onwards until Floor 30.

**STEP • 2**  
Make sure that you have all the required accessories for the installation


Below is a list of accessories that are necessary to install TimeTec BLE-16



**PW12V Switching Power Supply**  
AC/DC switching power supply to keep the battery charged during daily operation and also allows it to function during a power failure as well.

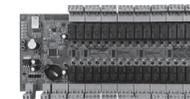

TimeTec BLE-16

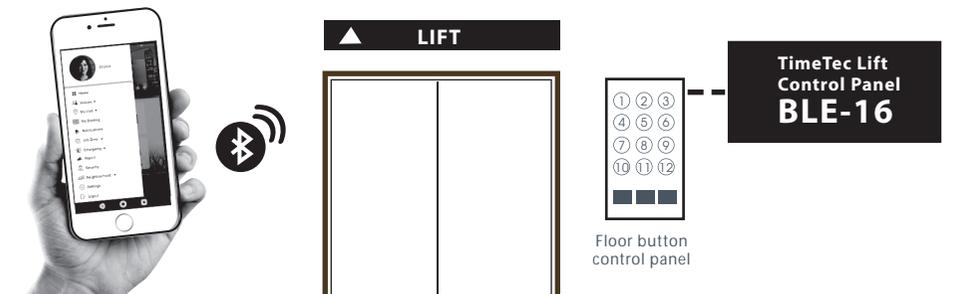

The User Guide for i-TimeTec App can be obtained in the App or in our website at [www.i-timetec.com](http://www.i-timetec.com)



