

Installation Guide




i-Kiosk 100 Plus

Fingerprint Color Multimedia for Time Attendance & Door Access Control System


Step 1 Determine the Location and Positioning of the Installation

- Avoid installing the terminals in locations that has contact with a strong light source (e.g direct sunlight, spotlight, fluorescent light, etc)

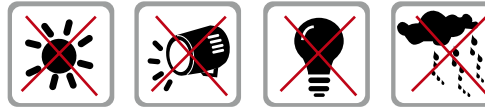

- Avoid installing the terminals in locations prone to high moisture or condensation levels in the air
- The recommended installation height of the terminal from the ground is 1.2 meter.

Step 2 Mounting Terminals

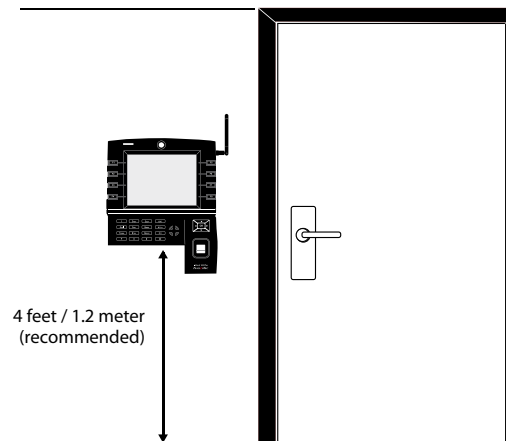





- After measuring the height accordingly and make relevant marking on the wall, drill the screws into the wall to secure the back plate.
- Attach the terminal to the back plate and tighten the screws. Refer to Appendix II for dimensions and measurements of installation.

Step 3 Wiring for Power Supply

i-Kiosk 100 Plus comes with a special key to unlock ports to power and door access as shown in the diagram marked B. There are two ways to connect the power to i-Kiosk 100 Plus.

1. Use the power adapter provided in the package and insert the power adapter to the port marked A in the diagram.
2. Use power cables (black and red) to connect to a linear power supply with specifications of 12VDC 3A. (Marked B)

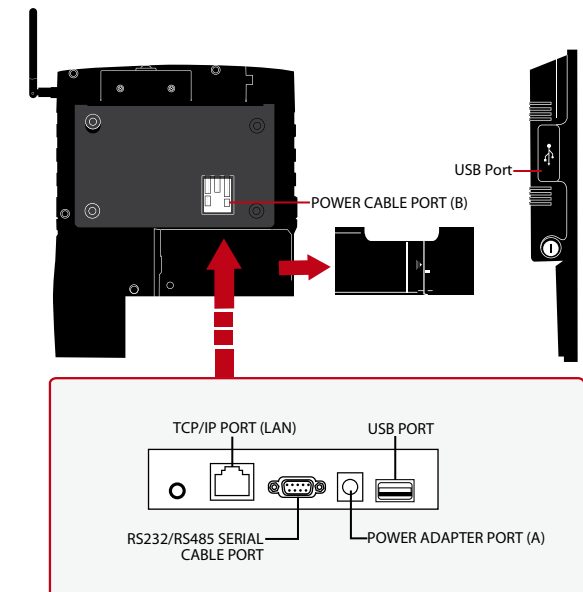

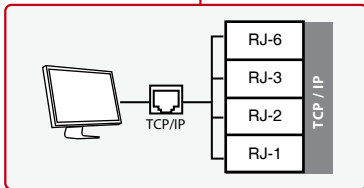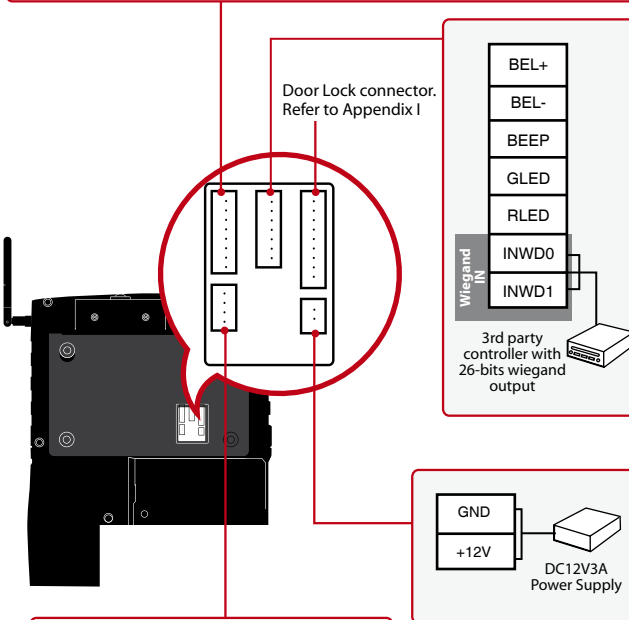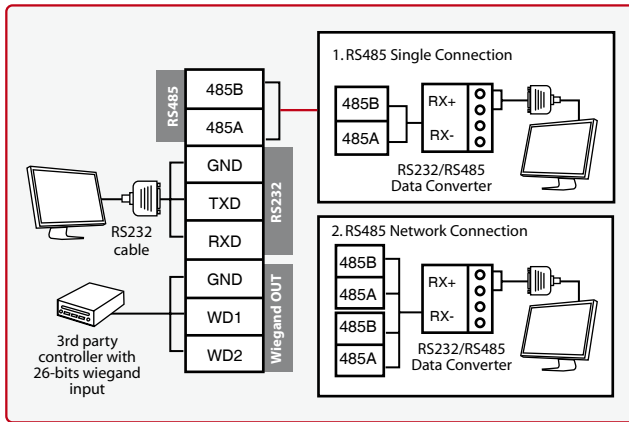

Step 4 Setting Up Data Communication

(Skip this step if you are using USB flash disk to transfer data)

TCP/IP – LAN Connection

For TCP/IP connection, plug the special RJ45 jack into the TCP/IP (LAN) Port of the terminal. Connect the other end (normal RJ45 jack) to the local area network hub or a PC. Configure the device ID, IP address, subnet mask and Gateway in the terminal (refer to the hardware user manual for details).

RS232 – Serial Port Connection

Plug the communication jack that is provided in the package to connect to the communication port of the terminal. Select wires with label RX, TX and GND, and connect the other end of these wires to a DB9 female connector. Configure the device ID and baudrate of the terminal (refer to the hardware user manual for details). Use the normal RS232 cable to plug into the RS232 port of the terminal.

RS485 – Serial Port Connection

Plug the communication jack that is provided in the package to connect to the communication port of the terminal. Select wires with label RS485+, RS485- and GND, and connect the other end of these wires to an RS232/485 data converter. Connect the other end of the data converter to a DB9 female connector. Configure the device ID and baudrate of the terminal (refer to the hardware user manual for details).


Step 5 Finalizing the Installation

1. Check that all cable connections are done correctly.
2. Attach the terminal to the corresponding back plates and tighten the screws to secure the terminal on the wall.
3. Switch on the power to the terminal.
4. Start using the terminal.

Other Accessories

FingerTec offers complementing accessories which can be used with your terminals. These optional accessories are available at <http://accessory.fingertec.com>

AdapTec AC

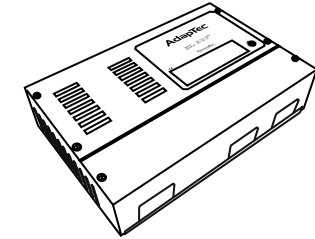

AdapTec AC

The AdapTec AC is a 12VDC power supply inclusive of a 110~240VAC switching linear power. The AdapTec supplies 12VDC power to the FingerTec terminal and door lock system as well as charges a 12VDC 7.0Ah backup battery simultaneously. During an event of a power failure, the back up battery automatically provides power to the terminal and maintains the door lock system. The AdapTec AC also prevents a secured door from being opened if it has been tampered with.

Enclosures


An acrylic-made enclosure that protects your terminal from the risk of meddling by unauthorized individuals. Our custom made enclosure are specially designed to fit your terminal perfectly with specific openings for fingerprint scanner and buttons. Our enclosure can be used to mitigate surrounding mild environmental hazards and help lengthen the lifespan of the terminals. However, do note that the enclosure is not dust-resistant and waterproof if subjected to extreme weather conditions.

Door Lock Accessories

FingerTec offers various door locks accessories to complement FingerTec door access product range.

Appendix I Power Supply & Door Lock System Wiring Diagrams


► Diagram 1 • Normally Close (NC)

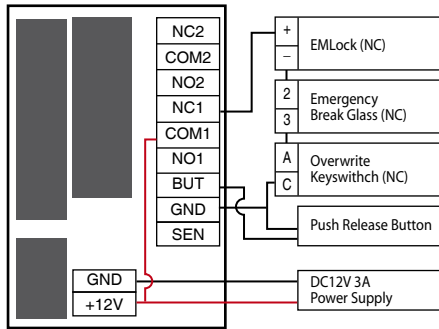

Door Lock Connectors


WIRING PORT	USAGE
NO1	Dry Contact (independ-ent power supply for door lock)
NC1	Dry Contact (independ-ent power supply for door lock) • NO type door lock (NO1-COM) • NC type door lock (NC1-COM) Power Contact (using power from terminal to power on door lock) • NO type door lock (NO-GND) • NC type door lock (NC-GND)
COM1	Dry Contact (independ-ent power supply for door lock) • NO type door lock (NO1-COM) • NC type door lock (NC1-COM) Power Contact (using power from terminal to power on door lock) • COM1 - +12V
NO2	
COM2	Alarm System NO Type – NO2 – COM2 NC Type – NC2- COM2
NC2	
SEN	Door Sensor (SEN-GND)
GND	Release button (BUT-GND)
BUT	
Bell+	Door Bell
Bell-	

► Diagram 2 • Normally Open (NO)

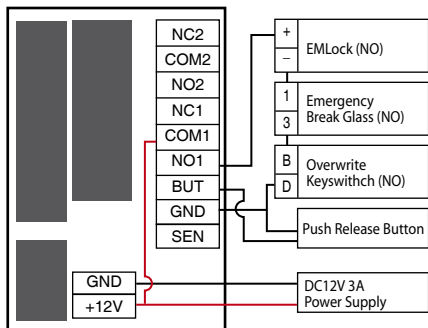

► Diagram 3 • Other Accessories

*Door Sensor, Alarm, Doorbell.

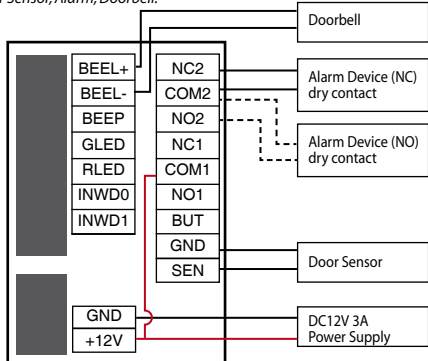


The terminal will trigger the alarm output (NO or NC) for the follow-ing situations:

- Door forced open (A door sen-sor must first be installed)
- Door open time out (A door sen-sor must first be installed)
- Terminal has been illegally dismantled

Use either Type NO or Type NC alarm device.

Appendix II Terminal Dimensions and Measurements

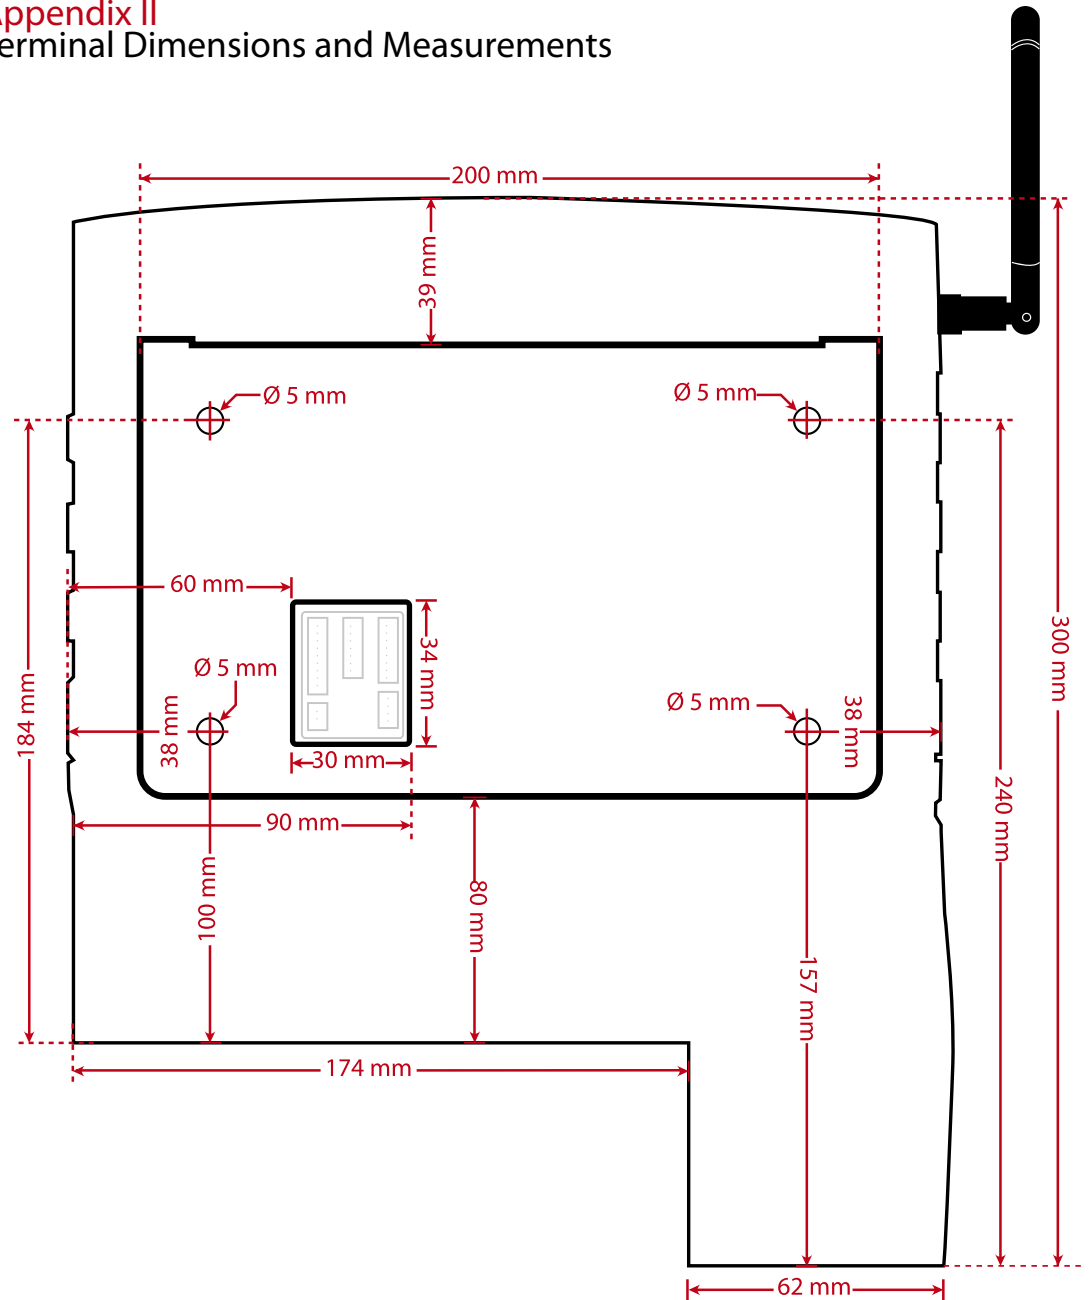

Front View of Back Plate