






O O FING@RTEC

Face ID 5/TD


Face ID 5

# **Quick Start Guide**

#### • Face ID 5/TD

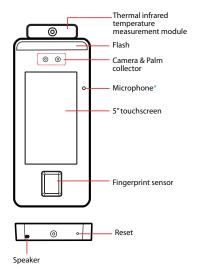

#### • Face ID 5

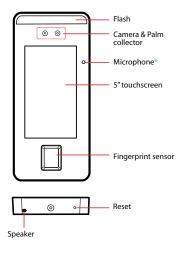

### **Quick Start Guide**

The Quick Start Guide is intended to provide the user with simple instructions on how to setup the terminal date/time and communication as well as to perform face enrollment and verification.

## 1 Setting the Date and Time

- 1. Click System on the main menu interface.
- 2. Click Date Time on the System interface.
- 3. You can manually set date and time and click Confirm to save.
- Click 24-Hour Time to enable or disable this format and select the date format.

## 2 Enrolling Palm/Face/Password

Refer to hardware user manual.

- 1. Adding Users, click User Mgt. on the main menu. Click New User.
- Register a User ID and Name, enter the User ID and Name.

#### Register palm Click Palm to enter the palm registration page. Select the palmto be enrolled.

#### ■ Register Face

Register face, click Face to enter the face registration page. Please face the camera and stay still during face registration.

#### Register Password

Click Password to enter the password registration page. Enter a password and re-enter it. Click OK. If the two entered passwords are different, the prompt "Password not match" will appear.

#### 3 Communication Settings

To input the IP address: Press Menu > COMM > TCP/IP > Key in IP address.

To input Subnet mask: Press Menu > COMM > Sub NetMask > Insert the numbers.

To input Gateway: Press Menu > COMM > Gateway > Insert the numbers.

## 4 Connect to AWDMS

#### ADWMS version 3.1

https://s3.amazonaws.com/files.fingertec.com/ Software+Releases/AWDMS/AWDMS3.1.zip

#### **ADWMS Setup Tool**

https://s3.amazonaws.com/files.fingertec.com/ Software+Releases/AWDMS/AWDMS+Setup+Tool.zip

## **Software Roadmap**



1

#### **Online Activation**

Use the terminal's serial number to activate your software online. Contact your local reseller or support@fingertec.com if you require offline software activation.

Software download / User guides Available online at https://product. fingertec.com/userguide.php

## 2 System Overview

#### User's Management

Add, delete, edit and manage user information and transaction logs.

Access Control Setup
Set up access restrictions and
door lock settings for each group
and user.

Attendance Calculation Setup (Optional)
Attendance rules and calculation
formulas must be determined out to
generate correct attendance reports.



#### Real Time Monitoring In/Out Records Monitor transactions that occur in the terminals in a real-time

manner.

## Download attendance and In/ Out movement records from terminals

Retrieve the transaction logs and access reports stored in the terminals into the server. In/Out movement records are only available for FingerTec access control models.

Viewing In / Out records Review access records and monitor staff movement.

## Generating access control reports

Generate professional and presentable access control / security reports.

# Check and edit attendance records Review the records and edit / insert / check for missing records.

Generating attendance reports
Generate professional and presentable
reports for analysis.

## Export attendance records for payroll or 3rd party software

Integrate the attendance records retrieved from FingerTec terminals to a relevant 3rd party software.

