


FINGERTEC



Face ID 5

Quick Start Guide

Terminal Overview

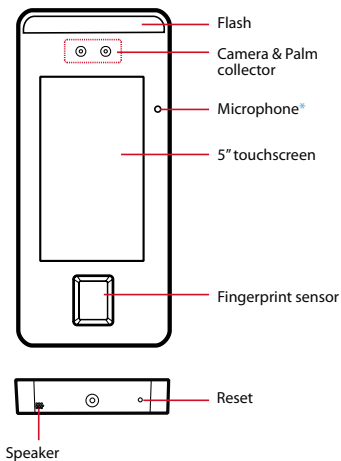

Quick Start Guide

The Quick Start Guide is intended to provide the user with simple instructions on how to setup the terminal communication with software as well as to perform user data enrollment and verification.

1 Device type settings

Menu > System > Device Type Settings

A) Ingress AWDMS ACC mode

Communication Protocol = Push Protocol
Device Type = A&C PUSH

B) Ingress AWDMS ATT mode

Communication Protocol = Push Protocol
Device Type = T&A PUSH

C) TimeTec Attendance

Communication Protocol = Push Protocol
Device Type = T&A PUSH

D) TimeTec Access

Communication Protocol = Best Protocol

2 Network configuration

(Ethernet or Wi-Fi setting)

A) Ethernet

Menu > COMM. > Ethernet > set DHCP ON or can set manually by disable DHCP.

- IP Address
- Subnetmask
- Gateway
- DNS(if required)

B) Wi-Fi

Menu > COMM. > Wi-Fi Settings > WIFI=ON (Optional upon request to enable the Wi-Fi option)

** Make sure the device is reachable with the server.*

** Do not connect the device via Ethernet and WiFi connections simultaneously.*

3 Cloud Server Setting

Can connect either to Ingress(AWDMS) or TimeTec solution - Make sure select your preferred Device Type Setting accordingly

Menu > COMM. > Cloud Server Settings

A) Ingress ACC and ATT Mode

Enable Domain Name = OFF
Server Address = Server PC IP address installed with the AWDMS
Server Port = 8088 (Default AWDMS port number)

B) TimeTec TA / Attendance

Enable Domain Name = ON
Server Address = <https://sg-push.zkclouds.com>

C) TimeTec Access

Server Address already predefine when selecting Best protocol in Device Type Setting)

4 Add Device to Software

(can opt either Ingress / TimeTec solution) - Make sure select your preferred Device Type Setting accordingly

A) Ingress ATT / Ingress ACC Mode

Software Installer:

Ingress MySQL : <https://bit.ly/FingerTec-AWDMS>

ADWMS : <https://bit.ly/Ingress-MySQL>

ADWMS Setup Tool: <https://bit.ly/ADWMS-Setup-Tool>

- Insert Device Name
- Select Communication Mode = AWDMS (ACC MODE) / AWDMS ATT (ATT MODE)
- Key-in Serial No. (Only for ATT mode)

B) TimeTec TA / Attendance

Device > Terminal > Smart DBS (Fingertec) > click + > Insert Serial Number, Terminal ID , Terminal Group , Location, Timezone , Work Location > Click ✓ to save the changes

C) TimeTec Access

- Device > Terminal > Smart DBS (Fingertec) > click + > Insert Serial Number, Terminal ID , Location , Timezone > click ✓ to save to save the changes
- Access point > Manage Access point > Add Location > Assign/Create Building > Create Floor, Upload Floor plan and add Access Points to the respective building
- Assign devices that you preferred to be connected to the specific Access Points and configure the access settings for each access point then save all changes

5 Upload User to Device

A) Ingress ACC Mode

1. Set device access level (only for ACC mode)
2. Sync to AWDMS (only for ACC Mode)
3. Set User Access Level (only for ACC mode)
4. Upload user to AWDMS (only for ACC mode)

B) Ingress ATT Mode

Select Users > select Device > select data > Upload

C) TimeTec TA / Attendance

1. Device > Terminal > Smart DBS (Fingertec)
2. Select device > Manage terminal
3. Click Upload User
4. Select user > click ✓ to submit

D) TimeTec ACC:

1. Access > Access Group > click Edit > Default Access Group 24 Hours
2. Select User > Select Access Point > click ✓ to submit
3. Click (Sync Symbol) > Select Access point > click Sync now

6 Enrolling User Data

Palm / Face / Fingerprint / Card / Password

Menu > User Mgt. > All Users > select User > Edit > Register the data as per your preferences

Register Palm: Click Palm to enter the palm registration page. Select the palm to be enrolled.

Register Fingerprint: Click Fingerprint to enter the Fingerrint registration page. Select the Fingerprint to be enrolled.

Register Face: Click Face to enter the face registration page. Please face the camera and stay still during face registration.

Register Card: Click Card to enter card registration page and wave your card.

Register Password: Click Password to enter the password registration page. Enter a password and re-enter it (maximum : 8 digit password) and click OK. If the two entered passwords are different, the prompt "Password not match" will appear

1

Online Activation


Use the terminal's serial number to activate your software online. Contact your local reseller or support@fingertec.com if you require offline software activation.

Software download / User guides

Available online at <https://product.fingertec.com/user-guide.php>

2

System Overview

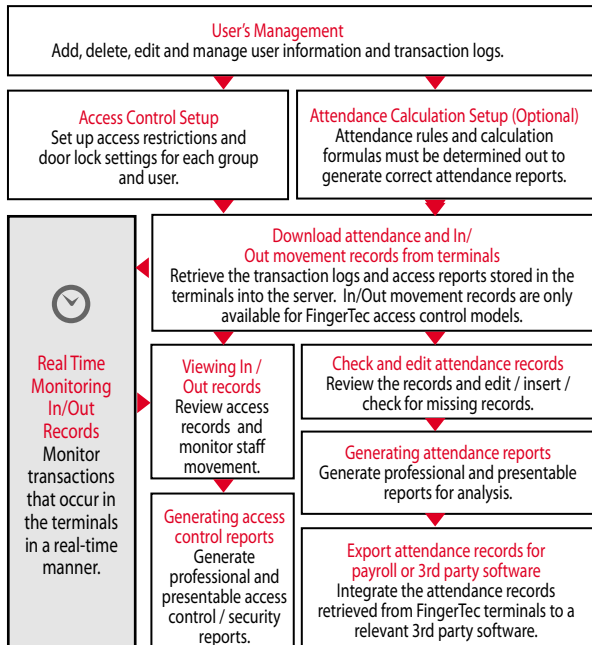

FINGERTEC