timeTec PATROL

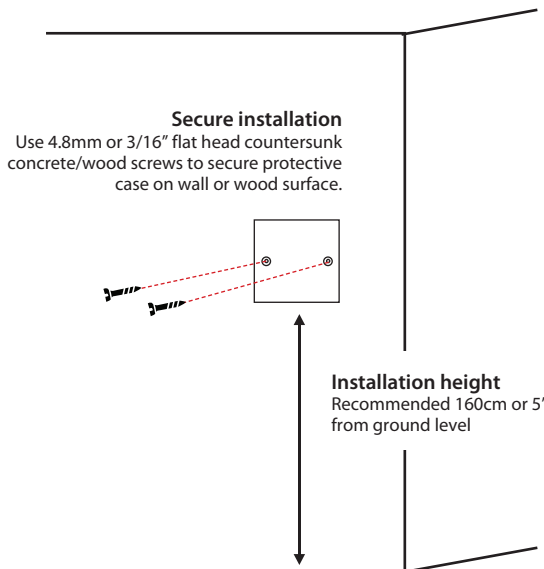www.timetecpatrol.com
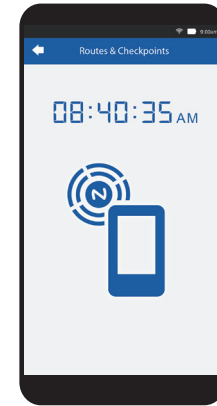
NFC TAG
PROTECTIVE CASE

INSTALLATION

Steps • 1
Stick the NFC tag inside the protective case

Steps • 2
Identify the checkpoint location and screw the protective case onto a wall at the location to serve as a patrol checkpoint.

Secure installation
Use 4.8mm or 3/16" flat head countersunk concrete/wood screws to secure protective case on wall or wood surface.

Installation height
Recommended 160cm or 5" from ground level

Steps • 3
Enrol the NFC tag as checkpoint through TimeTec Patrol mobile app

Q & A:

Q: Can Android phones read the NFC signal if we install a layer of protective case?
A: Yes, the NFC signal can still penetrate through the protective case to be picked up by NFC-enabled smartphones.

Q: Is the protective case weatherproof? Can I install it outdoor?
A: The protective case is not weatherproof but the NFC tag is so you can install the tags outdoor as checkpoints without any worry.