


Quick Guide

Installation for AC900/ R2 Series on **Glass Door**




FINGERTEC
One finger solves it all
www.fingertec.com

STEP 1

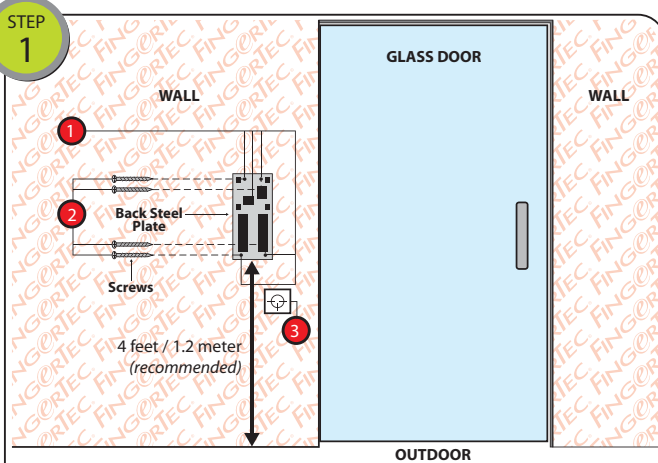


- 1 To install FingerTec® AC900/ AC800/AC800 Plus on the wall, drill 5 holes as shown. 4 small holes are for screws and the bigger hole is for the network cable.
- 2 Tighten the 4 screws to fix the Back Plate on the wall.
- 3 Install the keyswitch as per instructions given in the box. The keyswitch is an override key in case of system failure or breakdown.

STEP 2

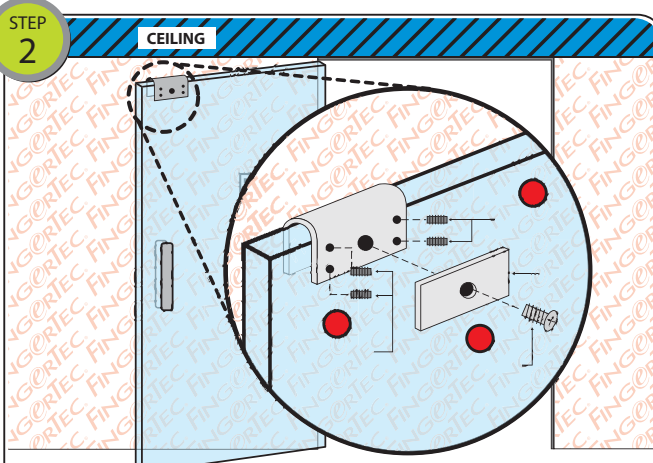


- 1 Lodge the U-Bracket into the upper edge of the glass doorframe. Tighten the 4 Allen Screws to hold the U-Bracket into position.
- 2 Place the Steel Bar on the side of the U-Bracket. Tighten the Philip Screw to lock the Steel Bar onto position.

STEP 3

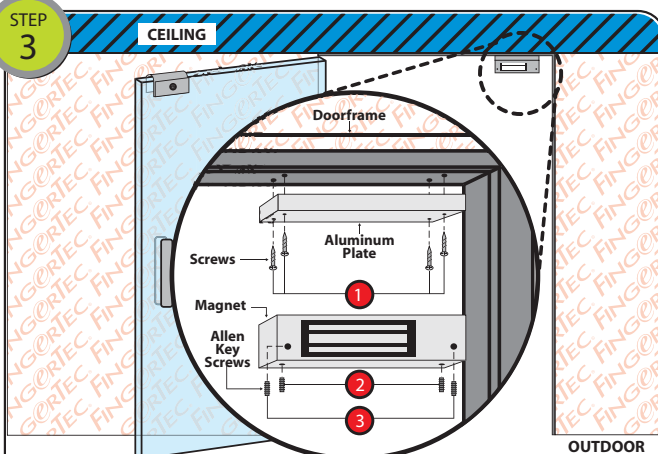

- 1 Drill 4 holes on the doorframe. Tighten the 4 screws to fix the Aluminum Plate properly on the doorframe.
- 2 Use Allen Key to tighten the 2 screws at the bottom of the Magnet. The Magnet will stick to the Aluminum Plate when the screws are tightened up.
- 3 Use Allen Key to tighten the other 2 screws on the sides of the Magnet.


STEP 4

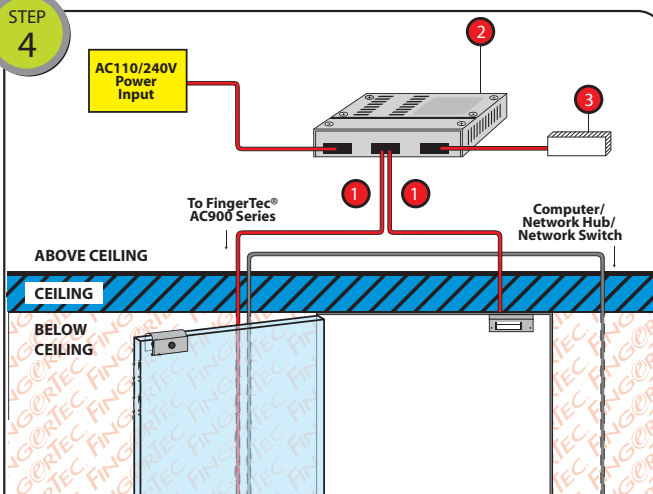

- 1 12V 3A DC Power Output
- 2 AdapTec AC (Note: Refer to page 5-11 for wiring diagrams.)
- 3 12V Rechargeable Battery

Note: It is recommended to place ①, ② and ③ out of sight, either above the ceiling or wall-mounted.


STEP 5

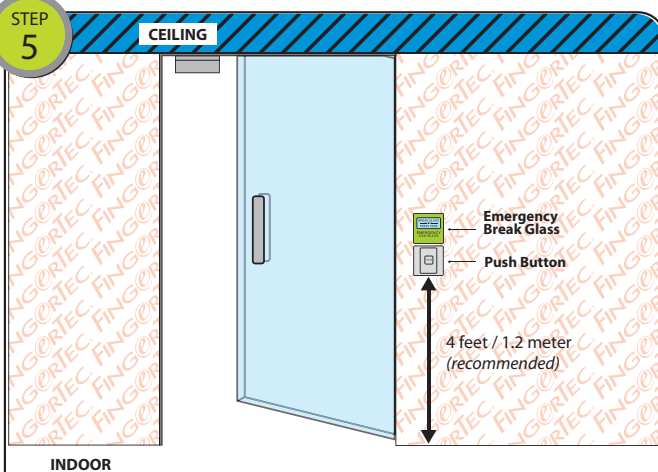

Emergency Break Glass and Push Button should be installed indoor. These two items are for user to open the door from the inside.

Note: Please conceal the wiring.

STEP 6

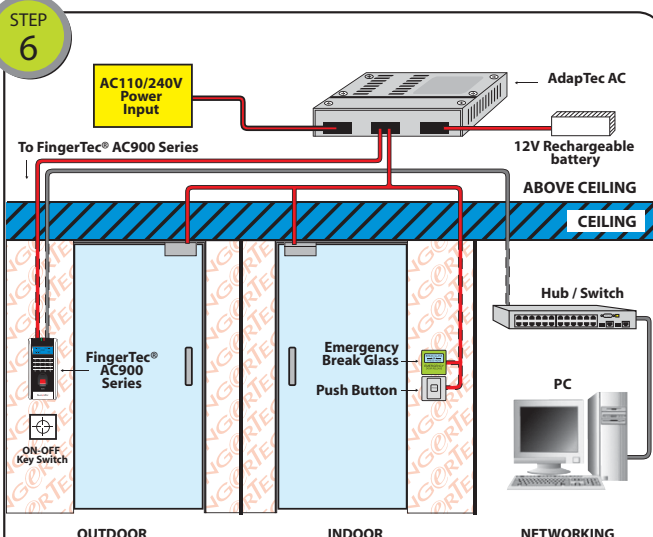

OVERVIEW OF THE WHOLE SYSTEM INSTALLATION