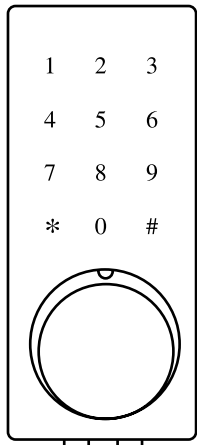


## Installation Guide

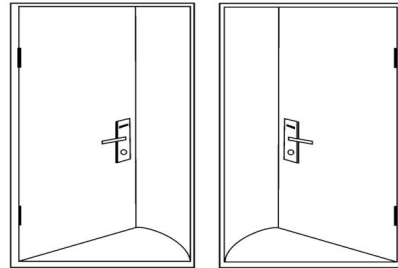


### SL-70B

Fingerprint Compact Smart Lock













### Installation condition

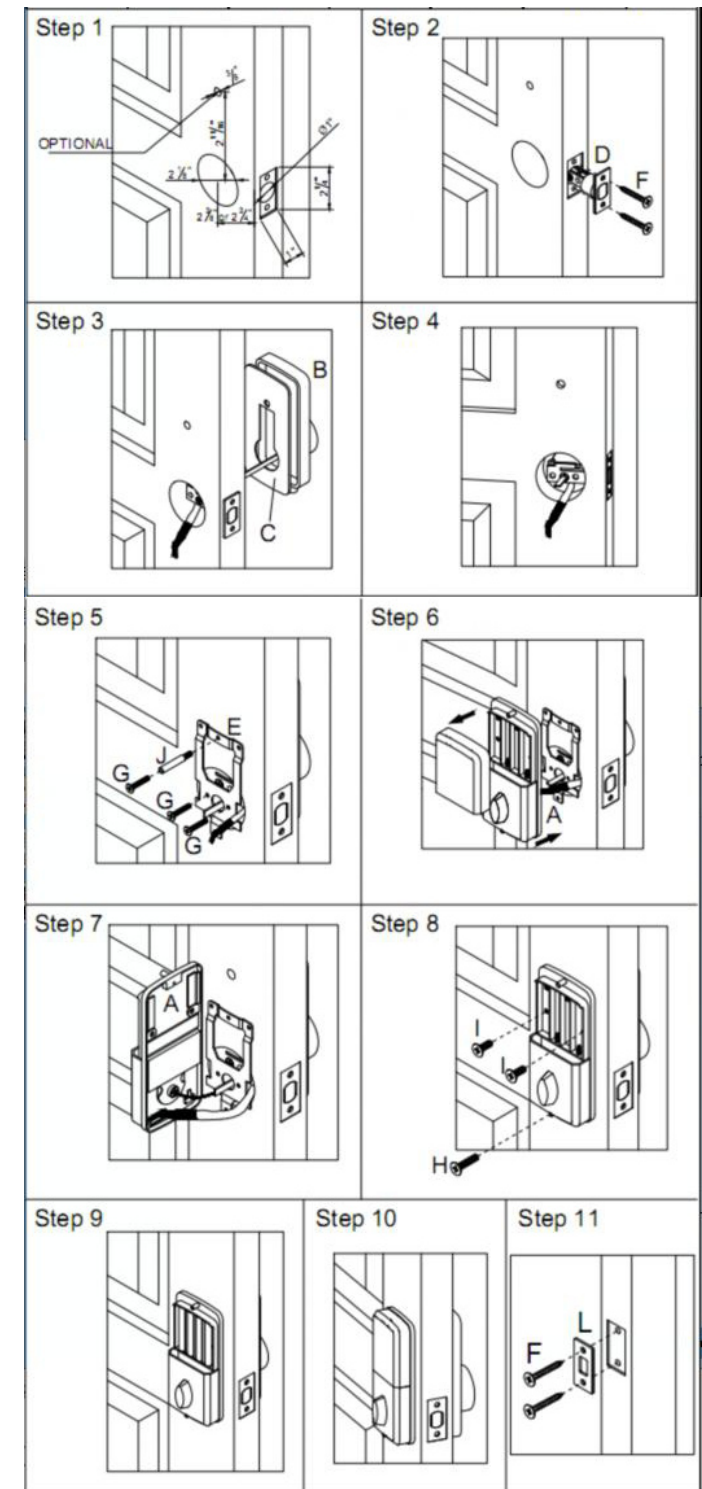
- Door frame  $\geq 110\text{mm}$
- Door thickness: 38-48mm
- To install the lock for right side handling, ensure the toggle button on the back assembly is set to L.
- To install the lock for left side handling, ensure the toggle button on the back assembly is set to R.



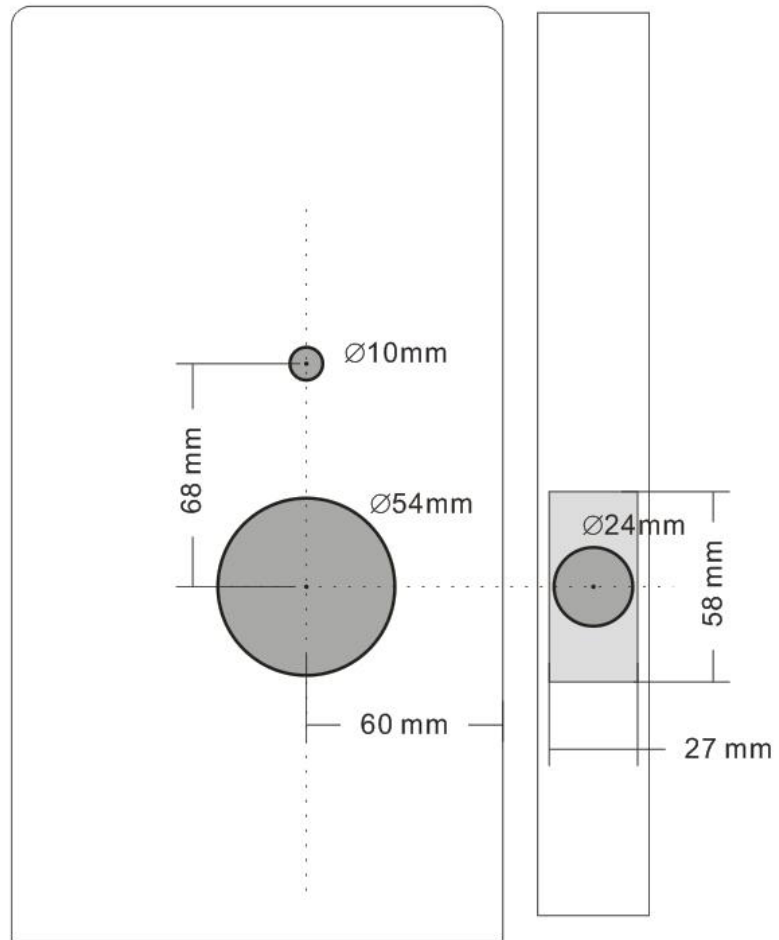
Left-handle (open into room)      Right-handle (open into room)

### Installation instructions step by step

ASSEMBLY INSTRUCTIONS					
 A 1PC	 B 1PC	 C 1PC	 D 1PC	 E 1PC	
 F 4PCS	 G 3PCS	 H 1PC	 I 2PCS	 J 1PC	 K 1PC
				 L 1PC	



# Door drill hole map



**FINGERTEC**