



Redefine Security

FingerTec® M2/R2 SERIES

Fingerprint Access Control & Time Attendance System

HARDWARE USER MANUAL

COPYRIGHT NOTICE

All rights reserved. No part of this book may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or by any information storage and retrieval system, without written permission from FingerTec Worldwide Ltd. Every precaution has been made to supply complete and accurate information. Information in this document is subject to change without prior notice.

DISCLAIMER

No person should rely on the contents of this publication without first obtaining advice from a qualified professional person. The company expressly disclaims all and any liability and responsibility to any reader or user of this book, in respect of anything, and of the consequences of anything, done by any such person in reliance, whether wholly or partially, upon the whole or any part of the contents of this book.

FINGERTEC WORLDWIDE LTD

For enquiries on technical matters, please forward the email to
support@fingertec.com

1 • GETTING STARTED

Introduction to FingerTec® M2/R2 Fingerprint Reader	4
• Complete Package - FingerTec® M2/R2 Model	6
• Materials Provided with FingerTec® M2/R2 Model	7
• Basic Features of FingerTec® M2/R2 Model	8

2 • USING THE FINGERTEC® FINGERPRINT READER

Using the Fingerprint Reader	10
Tips for Best Fingerprint Enrollment	11
Initial Set Up of the FingerTec® Fingerprint Reader	12
• Date/Time Adjustment	12
• Enrollment	13
• Enrollment of Supervisor/Administrator	13
• Enrollment of Normal User	15
• Fingerprint Verification	16
1 to Many (1:N) Fingerprint Matching	16
1 to 1 (1:1) Fingerprint Matching	16
• Password Enrollment	17
• Password Verification	18
• Deleting Users	18

3 • RFID CARD FUNCTION ON FINGERTEC® R2 MODEL

FingerTec® R2 With RFID Card (Hardware)	20
• Enrollment of RFID Card In FingerTec® R2 Model	20
• RFID Card Only	20
RFID Card + Fingerprint	21
RFID Card + Password	22
• Verification of RFID Card In FingerTec® R2 Model	24
RFID Card Only	24
Card + Fingerprint	24
Card + Password	25
FingerTec® R2 With RFID Card (Software TCMS V2)	25
• Fingerprint Management	25
• Download of RFID Card Users From FingerTec® Reader	26
• Update Of RFID Card Users To FingerTec® Reader	27
Types of Verification Method	28



4 • ACCESS OPTIONS	
Brief Introduction to Access Options	30
Verification Flow of Access Options	32
Function Description Definition of Time Zone	33
Definition of Grouping Function	34
User Access Options	34
Access Comb	36
Dsen. Delay (Door Sensor Delay)	36
Dsen. Mode (Door Sensor Mode)	36
Dsen. Alarm (Door Sensor Alarm)	36
Duress Options	37
Management of Duress Fingerprint	37
• Help Key	37
• Trigger Method	38
• Alarm Delay	38
5 • THE OTHER FUNCTIONS	
Pen Drive Management	39
System Option	39
Communication Option	40
Log Option	40
Auto Test	41
System Info	41
6 • INSTALLATION & COMMUNICATIONS (For FingerTec® Installer)	
Connections Available	42
Power Supply Connection	43
Communication Connection	43
• TCP/IP Connection	43
• RS232 Connection	44
• RS485 Single Connection	45
• RS485 Network Connection	45
• Wiegand 26-bit Input & Output	46
DOOR LOCK CONNECTION	47
APPENDIX • TROUBLESHOOTING	48

INTRODUCTION TO FINGERTEC® M2/R2 READER









The FingerTec® M2/R2 fingerprint readers are dual function readers. They can be used as time attendance recorder and at the same time function to control door access. Storage capacities of both readers are 1600/3000 fingerprint templates and 50,000/120,000 transactions logs, suitable for every office environment. One user could enroll up to 10 fingerprints but 2 fingerprints are recommended for every user to maximize the number of users in one reader.





Fingerprint enrolment of every user shall be done once and these templates are downloadable into FingerTec® TCMS V2 software for backup and they are transferable to other FingerTec® readers for verification.

Every time a registered user gets verified at the FingerTec® M2/R2, date and time of the transaction is stored as a transaction log. These logs can be downloaded to FingerTec® TCMS V2 software which is bundled with the package, for reports and further analysis. Download process can be done via TCP/IP connection, USB flash disk, R232 and RS485 connections.

Specifications		Model	
Model	M2	R2	
			
Surface finishing	Zinc alloy	ABS	
Functions	Access Control & Time Attendance System		
FP template capacity	1600/3000		
Transaction log	50000/120000		
Connections	TCP/IP, RS232, RS485, USB flash disk, Wiegand input/output		
Subnet mask & Gate way	Available		
Card reader	Not available	RFID reader	
Card capacity	Not available	65335 cards users	
Sensor	Optical sensor with silicon coating		
Software available	Language available : English, Arabic, Chinese Simplified, Chinese Traditional, French, German, Indonesian, Malay, Russian, Farsi, Portuguese, Spanish, Thai and Vietnamese.		

Complete Package - FingerTec® M2/R2 Model




ITEM		M2	R2
Fingerprint reader		√	√
Screwdriver		√	√
USB extension		√	√
TCP/IP cables (The lengths of the cable are 1m and 1.5m)		√	√
TCP/IP joint		√	√
Door accessories cable		√	√
RS232 cable		√	√
RS485 and Wiegand cable		√	√
Power supply cable		√	√

ITEM		M2	R2
Software CD		√	√
RFID card (5 pieces)		X	√
USB Flash Disk	 Note Buy at http://accessory.fingertec.com		
AdapTec AC		√	√

Materials provided with FingerTec® M2/R2 Model

FingerTec® M2/R2 Model	
Quick Start Guide	√
Hardware User Manual	√
Software User Manual	√
Video Guide for Hardware	√
Video Guide for TCMS V2	√
Sample of enrollment form	√

Basic Features of FingerTec® M2/R2 Model

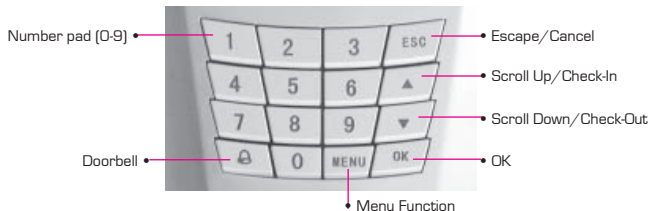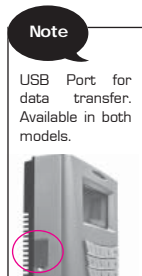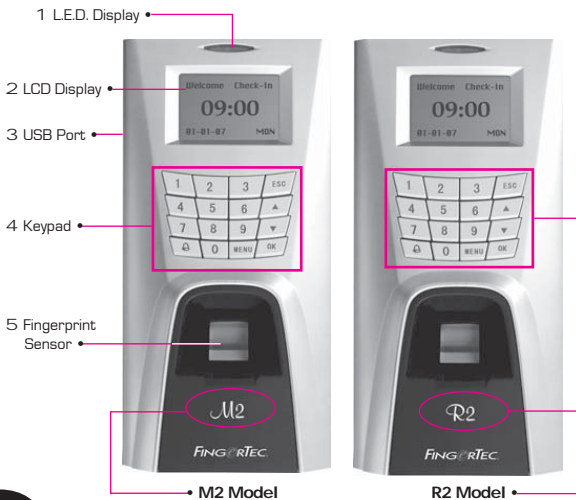

1 L.E.D Display

The L.E.D display has two lights.

Green	The reader is in standby mode or to indicate that user has been successfully verified.
Red	To indicate that user verification has failed.

2 LCD Screen

Screen that displays instructions and status of the reader.

3 USB Port

To upload/download users information, password, fingerprint and transaction logs via USB flash disk.

4 Keypad

Keys of 0-9, a Power on and off button, an OK button, an Escape/Cancel button, a Scroll up/Check-In button, a Scroll Down/Check-Out button, a doorbell button and a menu button.

5 Fingerprint Sensor

For user to place fingerprint for identification/verification.

Note

RFID card induction area is only available in FingerTec® R2.

2 • USING THE FINGERTEC® FINGERPRINT READER

FingerTec® fingerprint reader provides 3 types of enrollment method:


- **Fingerprint Enrollment**
User enrolls his fingerprint template into a reader and the template will be used for future verifications.
- **Password Enrollment**
For user who has difficulty to enroll his fingerprint due to poor fingerprint quality, he is recommended to enroll password. Password enrollment is also suitable for visitors and temporary workers.
- **Fingerprint and Password Enrollment**
Under this option, a user can enroll both fingerprint and password at the same time. The user can either use fingerprint or password to report attendance or to gain access.

USING THE FINGERPRINT READER

This chapter will guide on how to use the FingerTec® fingerprint reader effectively. To get a good reading every time, a fingerprint enrollment for the first time must be done properly.



What you should do



Place finger flat on the fingerprint sensor. Make sure the finger's midpoint is placed at the center of the fingerprint sensor.

What you should NOT do



UPRIGHT



ASKEW



OFF CENTER



PART

TIPS FOR BEST FINGERPRINT ENROLLMENT

There are 5 tips to get good fingerprint enrollment:

- **Use INDEX finger**

Index finger is smaller than thumb and it can be comfortably placed on the sensor. The use of thumb is not recommended because the center points might not be placed properly on the sensor, hence cannot be read by the sensor due to its larger size.

- **Make sure the finger is not wet, too dry, injured or dirty**

The finger needs to be slightly moist to enable the sensor to read the minutiae points on the fingerprint.

- **Place the center points of your finger at the center of the sensor**

The center points of a finger is an area where there is a swirl and the center points must be properly placed on the sensor during enrollment.

- **Don't press hard at the sensor, just place your finger on the sensor**

The sensor is reading minutiae points of your finger and placing a finger properly on the sensor will prompt the sensor to read those points. Pressing your finger hard on the sensor is not necessary.

- **Don't do enrollment under bright light or direct sunlight**



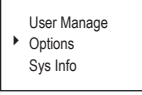


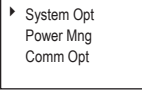

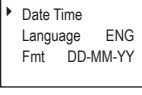

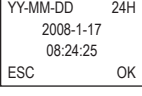

It is important to note that bright light or sunlight could interfere with the reading of the sensor. Avoid placing the reader under direct sunlight or bright light to avoid difficulty in enrollment and future verification.

INITIAL SET UP OF THE FIN- GERTEC® FINGERPRINT READER

Date/Time Adjustment

When first installing the FingerTec® fingerprint reader, it is important to set the correct date and time.

Follow the steps below to access the Date/Time adjustment menu:

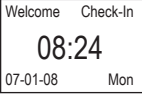When you see this	Do this
	 Press once
	 Press once  Press once
	 Press once
	 Press once
	Use the keypad to key in the year, month and date. Scroll down more to change the day, hour, minute and seconds  Press once

When you see this

Do this

Welcome Check-In
08:24
 07-01-08 Mon

 Press once

▶ User Manage
 Options
 Sys Info

 Press once

Enroll User
 ▶ Enroll Admin
 Delete



 Press once

 Press once



▶ Enroll FP
 Enroll Pwd
 FP & Pwd

 Press once



Admin Accredited
 Supervisor
 ESC OK

 Press once to confirm or
 Press once to cancel operation

Enroll FP
 New Enroll
 ESC OK

 Press once to confirm or
 Press once to cancel operation

New Enroll
 User ID 00001
 ESC OK

Press 1 on the keypad for ID
 00001
 Press once to confirm or
 Press once to cancel operation

When you see this

Do this

New Enroll
 00001
 Place Finger...
 ESC/Exit



Place the center point of fingerprint properly on the sensor. Place fingerprint 3 times during enrollment.





Read [page 11](#) for tips on fingerprint scanning technique.

This shows templates has been successfully captured; and "0" means that the first fingerprint template is recorded.

New Enroll
 00001-0
 ESC OK [Save]

 Press once to confirm or
 Press once to cancel operation

New Enroll
 Continue?
 ESC OK [Save]



 Press once to add backup fingerprint for enrolled user ID. or
 Press once to add new user

Backup Enroll
 00002-1
 Place Finger...
 ESC/Exit

Place the center of your fingerprint properly at the sensor. Place the fingerprint; 3 times in order for the reader to capture the fingerprint templates.

Backup Enroll
 User ID 00001-1
 ESC OK [Save]







This shows templates has been successfully captured; the "-1" means template of the second finger is captured good.

 Press once to confirm or
 Press once to cancel operation









Congratulations! A supervisor has been enrolled in the system. As a supervisor, he can manage the FingerTec® fingerprint reader by adding users, deleting users and various other functions through the keypad.

Enrollment of Normal User

A normal user is only allowed to use FingerTec® reader for identity verification, and he does not have any other authorities to access the system. To add a normal user, follow the steps below:

When you see this	Do this
<div style="border: 1px solid black; padding: 5px;"> <p>Welcome Check-In</p> <p style="font-size: 24pt; text-align: center;">08:24</p> <p>07-01-08 Mon</p> </div>	<p> Press once</p>
<div style="border: 1px solid black; padding: 5px;"> <p>▶ User Manage Options Sys Info</p> </div>	<p> Press once</p>
<div style="border: 1px solid black; padding: 5px;"> <p>▶ Enroll User Enroll Admin Delete</p> </div>	<p> Press once</p>
<div style="border: 1px solid black; padding: 5px;"> <p>▶ Enroll FP Enroll Pwd FP & Pwd</p> </div>	<p> Press once</p>
<div style="border: 1px solid black; padding: 5px;"> <p>New Enroll New Enroll</p> <p>ESC OK</p> </div>	<p> Press once to confirm or  Press once to cancel operation</p>

To enroll more users, repeat the same steps above.

When you see this	Do this
<div style="border: 1px solid black; padding: 5px;"> <p>New Enroll User ID 00002</p> <p>ESC OK</p> </div>	<p>Press number 2 on the keypad for ID 00002</p> <p> Press once to confirm or  Press once to cancel operation</p>
<div style="border: 1px solid black; padding: 5px;"> <p>New Enroll 00002-1 Place Finger... ESC/Exit</p> </div>	<p>Place the center point of your fingerprint properly at the sensor. You need to place your finger to capture your fingerprint 3 times for your reader to capture your fingerprint template.</p>
<div style="border: 1px solid black; padding: 5px;"> <p>New Enroll 00002-0</p> <p>ESC OK [Save]</p> </div>	<p>This shows template has been successfully captured; the "-0" means template of first finger is captured good.</p> <p> Press once to confirm or  Press once to cancel operation</p>
<div style="border: 1px solid black; padding: 5px;"> <p>New Enroll Continue?</p> <p>ESC OK</p> </div>	<p> Press once to add backup fingerprint for enrolled user ID. or  Press once to add new user.</p>
<div style="border: 1px solid black; padding: 5px;"> <p>Backup Enroll 00002-1 Place Finger... ESC/Exit</p> </div>	<p>Place center point of fingerprint properly at the sensor. Place the fingerprint 3 times for your reader to capture your fingerprint template.</p>
<div style="border: 1px solid black; padding: 5px;"> <p>Backup Enroll User ID 00002-1</p> <p>ESC OK [Save]</p> </div>	<p>This shows template has been successfully captured; the "-1" means template of first finger is captured good.</p> <p> Press once to confirm  Press once to go back</p>

Fingerprint Verification

FingerTec® reader supports 2 types of fingerprint verification method. User can choose either method to verify his fingerprint at the FingerTec® reader. 2 types of fingerprint verification methods are:

- 1 to Many (1:N) fingerprint matching
- 1 to 1 (1:1) fingerprint matching

1 to Many (1:N) Fingerprint Matching



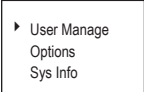

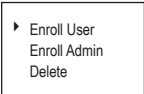

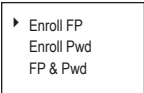





When you see this	Do this			
<table border="1"><tr><td>Welcome Check-In</td></tr><tr><td>08:24</td></tr><tr><td>07-01-08 Mon</td></tr></table>	Welcome Check-In	08:24	07-01-08 Mon	Place the enrolled finger properly on the fingerprint sensor.
Welcome Check-In				
08:24				
07-01-08 Mon				
<table border="1"><tr><td>FP Verify</td></tr><tr><td>Remove finger</td></tr></table>	FP Verify	Remove finger	Wait a second before removing the finger from the fingerprint sensor.	
FP Verify				
Remove finger				
<table border="1"><tr><td>FP Verify</td></tr><tr><td>User ID 00001</td></tr><tr><td>Verified</td></tr></table>	FP Verify	User ID 00001	Verified	FingerTec® reader verifies that the user ID is 00001.
FP Verify				
User ID 00001				
Verified				
<table border="1"><tr><td>FP Verify</td></tr><tr><td>Please Try Agn.</td></tr></table>	FP Verify	Please Try Agn.	If a finger failed to be verified by the FingerTec® reader, it will prompt the user to try again.	
FP Verify				
Please Try Agn.				








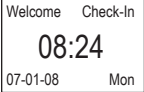


1 to 1 (1:1) Fingerprint Matching

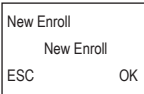When you see this	Do this			
<table border="1"><tr><td>Welcome Check-In</td></tr><tr><td>08:24</td></tr><tr><td>07-01-08 Mon</td></tr></table>	Welcome Check-In	08:24	07-01-08 Mon	Key in the user ID as defined when enrolling a finger on the FingerTec® fingerprint reader. For example 1 for 00001.
Welcome Check-In				
08:24				
07-01-08 Mon				
<table border="1"><tr><td>1:1 FP Verify</td></tr><tr><td>User ID 00001</td></tr><tr><td>ESC OK[Pwd]</td></tr></table>	1:1 FP Verify	User ID 00001	ESC OK[Pwd]	Place the enrolled finger properly on the fingerprint sensor.
1:1 FP Verify				
User ID 00001				
ESC OK[Pwd]				
<table border="1"><tr><td>1:1 FP Verify</td></tr><tr><td>User ID 00001</td></tr><tr><td>Verified</td></tr></table>	1:1 FP Verify	User ID 00001	Verified	The FingerTec® fingerprint sensor verifies that the user ID is 00001.
1:1 FP Verify				
User ID 00001				
Verified				
<table border="1"><tr><td>1:1 FP Verify</td></tr><tr><td>User ID 00001</td></tr><tr><td>Please Try Agn.</td></tr></table>	1:1 FP Verify	User ID 00001	Please Try Agn.	If a finger failed to be verified by the FingerTec® reader, it will prompt the user to try again.
1:1 FP Verify				
User ID 00001				
Please Try Agn.				

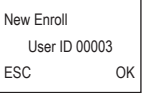Password Enrollment

For user who cannot enroll his fingerprint, he can choose to use passwords. Follow the steps below:

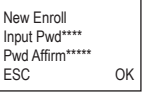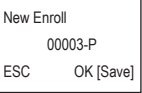When you see this	Do this
	 Press once
	 Press once
	 Press once
	 Press once  Press once
	 Press once to confirm or  Press once to cancel operation







When you see this	Do this
	Press number 3 on the keypad for ID number 00003  Press once to confirm or  Press once to cancel operation
	Key in the password Maximum 5 characters in length  Press once to confirm
	Retype the password for confirmation and  Press once to confirm
	The "-P" shown means that password has been successfully recorded.  Press once to confirm or  Press once to cancel operation



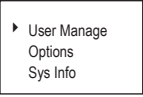

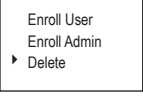




Password Verification

User with password enrollment can always use password to report attendance or gain access from the FingerTec® readers.

Deleting Users

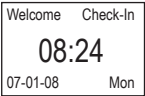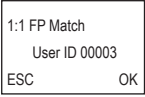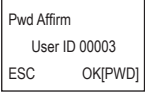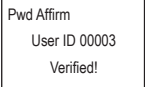The FingerTec® system also allows deletion of user from the system. This is important as employees come and go. Therefore, for those who had left the company, their fingerprint templates or records must be deleted from the system to avoid any misuse of the system. Only an administrator or a supervisor has the rights to delete user. Follow the steps below to delete any user:

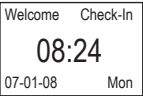When you see this	Do this
	Key in the user ID by using keypad
	Press OK to confirm that it is the correct ID.  Press once to confirm
	Key in the matching password by using keypads  Press once to confirm
	The FingerTec® fingerprint reader verifies that user ID user ID is 00003

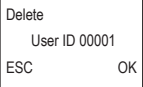When you see this	Do this
	 Press once
	 Press once
	 Press 2 times  Press once
	 Key in user ID Press once

When you see this**Do this**

Del Fingerprint
1-0
ESC OK

- OK** Press once to confirm or
- ESC** Press once to cancel operation

Del User
1
ESC OK

- OK** Press once to confirm or
- ESC** Press once to cancel operation

Del User
Delete
ESC OK

- OK** Press once to confirm or
- ESC** Press once to cancel operation

User will be deleted from the reader following the above steps.

Note

Remember to key in the correct User ID for deletion.

3 • RFID CARD FUNCTION ON R2 MODEL

HARDWARE

FINGERTEC® R2 WITH RFID CARD

Enrollment of RFID Card In FingerTec® R2 Model

FingerTec® R2 supports enrollment of RFID card. User can use RFID card only to report his attendance in the reader. The reader provides 3 extra enrollment methods, which include:

- RFID card only
- RFID card + fingerprint
- RFID card + password

Each RFID card has a unique Card ID. During enrollment, this Card ID will be read from an RFID card, and it will be matched with a User ID supported by the reader.



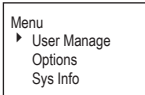

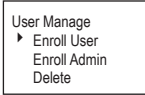

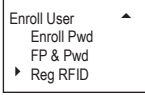




RFID card only



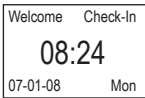


Each RFID card user must register his RFID card to FingerTec® R2, regardless of whether he is using RFID card only or he combines the Card ID with fingerprint, or with password.

RFID card users who do not enroll their fingerprints or password into a reader will only be able to use RFID card to report for time attend-

ance when the reader is configured to read card only.

To configure the reader to read RFID card ONLY follow the steps below:














When you see this	Do this
	 Press once
	 Press once
	 Press once
	 Press 3 times  Press once
	 Press once

When you see this	Do this
<div style="border: 1px solid black; padding: 5px;"> New Enroll User ID 00001 ESC OK </div>	 Keyin ID Press once to confirm
<div style="border: 1px solid black; padding: 5px;"> New Enroll Show the card User ID 00001 ESC OK </div>	Place card at the induction area [the keypad area]. The card ID will be read by the reader.
<div style="border: 1px solid black; padding: 5px;"> New Enroll CARD:9067337 User ID 00001 ESC OK </div>	The card ID and the user ID will be shown on the display.  Press once to confirm or  Press once to cancel operation
<div style="border: 1px solid black; padding: 5px;"> New Enroll 00001-C ESC OK </div>	 Press once to confirm
<div style="border: 1px solid black; padding: 5px;"> New Enroll Continue? ESC OK </div>	 Press 5 times to return to the main menu

RFID card + Fingerprint

Users must register their RFID cards to the reader before they can use the card and fingerprint to report for time attendance.

Before a reader could read any RFID card, it must be configured correctly to accept RFID card information. Follow the steps below to do reader configuration.

When you see this	Do this
<div style="border: 1px solid black; padding: 5px;"> Welcome Check-In 08:24 07-01-08 Mon </div>	 Press once
<div style="border: 1px solid black; padding: 5px;"> Menu User Manage ▶ Options Sys Info </div>	 Press once  Press once
<div style="border: 1px solid black; padding: 5px;"> Options Comm Opt Log Opt ▶ Access Options </div>	 Press 4 times  Press once
<div style="border: 1px solid black; padding: 5px;"> Enroll User Enroll Pwd FP & Pwd ▶ Reg RFID </div>	 Press 10 times  Press once
<div style="border: 1px solid black; padding: 5px;"> Group VerType ▶ 1 FP/PW/RF 2 FP/PW/RF 3 FP/PW/RF </div>	 Press once  Press to choose FP / PW / RF  Press once  Press once
<div style="border: 1px solid black; padding: 5px;"> Group VerType Save? ESC OK(Save) </div>	 Press once  Press 3 times to return to the main menu

User needs to enroll his fingerprint to enable him to use the card with fingerprint

When you see this | Do this

Welcome Check-In
08:24
 07-01-08 Mon

 Press once

Menu ▲
 ▶ User Manage
 Options
 Sys Info

 Press once

User Manage ▲
 ▶ Enroll User
 Enroll Admin
 Delete

 Press once

Enroll User ▲
 ▶ Enroll FP
 Enroll Pwd
 FP & Pwd


 Press once

Enroll FP
 New Enroll
 ESC OK

 Press once

Backup Enroll
 User ID 00001
 ESC OK

Key in user ID that has been enrolled with RFID card

 Press once to confirm


Backup Enroll
 00001-0
 Place Finger
 ESC OK


Place center of the fingerprint properly at the sensor. You need to place the fingerprint 3 times for the reader to capture the fingerprint template.

When you see this | Do this


Backup Enroll
 User ID 00001
 ESC OK(Save)

This shows template has been successfully captured.

 Press once to confirm or

 Press once to cancel operation

Backup Enroll
 Continue
 ESC OK

 Press 5 times to return to the main menu

RFID card + password

User must register his RFID cards with the reader before he can use the RFID card with password to report time attendance.

Configure the reader to request for a password.

When you see this | Do this

Welcome Check-In
08:24
 07-01-08 Mon

 Press once

Menu ▲
 User Manage
 ▶ Options
 Sys Info









 Press once

 Press once




Options ▼
 Comm Opt
 Log Opt
 ▶ Access Options









 Press 4 times

 Press once

When you see this	Do this
Access Options ▲ Duress Options Alarm CNT 0 ▶ Group VerType	 Press 10 times  Press once
Group VerType ▶ 1 FP/PW/RF 2 FP/PW/RF 3 FP/PW/RF	 Press once  Press to choose FP/PW/RF  Press once  Press once
Group VerType Save? ESC OK(Save)	 Press once  Press 3 times to return to the main men

User needs to enroll his password to enable him to use the card with password.

When you see this	Do this
Welcome Check-In 08:24 07-01-08 Mon	 Press once
Menu ▲ ▶ User Manage Options Sys Info	 Press once
User Manage ▲ ▶ Enroll User Enroll Admin Delete	 Press once

When you see this	Do this
Enroll User ▲ Enroll FP ▶ Enroll Pwd FP & Pwd	 Press once  Press once
Enroll FP New Enroll ESC OK	 Press once
Backup Enroll Input Pwd 00002 ESC OK	Key-in user ID enrolled with RFID card  Press once
Backup Enroll Input Pwd xxxx ESC OK	Key-in password, maximum 5 numeric numbers  Press once
Backup Enroll Input Pwd xxxx Pwd Affirm xxxx	Re-enter password to confirm
Backup Enroll 00001-0 ESC OK(Save)	 Press once to confirm or  Press once to cancel operation
Backup Enroll Continue? ESC OK	 Press 5 times to return to main menu

Verification With RFID Card In R2 Model

RFID card user can do verifications at R2 model by using the following combinations:

- RFID card only
- RFID card with fingerprint
- RFID card with password

RFID Card Only

To enable this operation, configure option "Card Only" in Advance Option to "Yes".

When you see this	Do this
<div style="border: 1px solid black; padding: 5px; text-align: center;">Welcome Check-In 08:24 07-01-08 Mon</div>	Place RFID card at the induction area.
<div style="border: 1px solid black; padding: 5px; text-align: center;">Verify PIN Card CARD : 9067337 User ID : 00001 Verified</div>	The Card ID and the User ID will be prompted and you will hear "Thank You".
<div style="border: 1px solid black; padding: 5px; text-align: center;">Verify PIN Card No Enroll</div>	If verification is failed, the screen will show "No Enroll" and you will hear "Invalid ID".



Card & Fingerprint

To enable this operation, configure option "Card Only" in Advance Option to "No".

When you see this	Do this
<div style="border: 1px solid black; padding: 5px; text-align: center;">1:1 FP Match CARD : 9067337 ESC OK (Pwd)</div>	Place card at the induction area. Card ID will be displayed. Place finger on the scanner to capture the fingerprint.
<div style="border: 1px solid black; padding: 5px; text-align: center;">1:1 FP Match CARD : 9067337 User ID : 00001 Verified</div>	User ID will be prompted and you will hear "Thank You"
<div style="border: 1px solid black; padding: 5px; text-align: center;">1:1 FP Match CARD : 9067337 Please try again</div>	If verification is failed, you will hear "Please Try Again".

Card & Password

To enable this operation, configure option "Card Only" in Advance Option to "No".

When you see this	Do this
<pre>1:1 FP Match CARD : 9067387 ESC OK (Pwd)</pre>	<p>Place card at the induction area.</p> <p> Press once</p>
<pre>1:1 FP Match CARD : 9067387 User ID : 00002 Input Pwd : xxxxx</pre>	<p>User ID is displayed</p> <p> Press once to confirm and enter your password</p>
<pre>Pwd Affirm CARD : 9067387 User ID : 00002 Verified</pre>	<p>You will hear "Thank You" if password is correctly entered.</p>
<pre>Pwd Affirm CARD : 9067387 User ID : 00002 Error Pwd</pre>	<p>You will hear "Incorrect password" if password is wrongly entered.</p>

SOFTWARE

FINGERTEC® R2 WITH RFID CARD

FingerTec® R2 model is using software with additional functions in Fingerprint Management.

The management allows the RFID card number to be enrolled into FingerTec® R2 model. The technique of saving and transferring of RFID card number is similar to those of fingerprint and password.

Fingerprint Management

The above diagram is showing the Fingerprint Management page with a new column known as card. This column stores and displays RFID card numbers that have been enrolled for the users. Only users that have enrolled with RFID cards will have information on the Card column in TCMS V2.

Please include "Fingerprint" and "Username + Privilege + Password" before an update process begins.

TYPES OF VERIFICATION METHOD

R2 model supports four types of verification method, which include fingerprint, password, PIN (User ID) and RFID card. User can opt to use multi verification method to increase security level. However, the fingerprint template capacity for this model is limited to 3,000 and the RFID card is up to 65335. Any combinations of verification methods would reduce user capacity of the R2 reader.

Please follow the steps below to configure the multi verification methods.

When you see this

Do this

Welcome Check-In
08:24
07-01-08 Mon

 Press once

Menu ▲
User Manage
▶ Options
Pen Drive Mng

 Press once

 Press once

Options ▼
Comm Opt
Log Opt
▶ Access Options

 Press once

 Press once


Access Options ▲
Duress Options
Alarm CNT 0
▶ Group VerType

 Press 10 times

 Press once

Group VerType
▶ 1 FP/PW/RF
2 FP/PW/RF
3 FP/PW/RF

 Press once

 Press to choose the multi verification method

 Press once

 Press once

Group VerType
Save ?
ESC OK(Save)

 Press once

 Press 3 times to

R2 model supports the following combinations of verification.

Type of verifications	Operations
FP / PW / RF	Reader verifies users via fingerprint, password or RFID card.
FP	Reader verifies users via fingerprint only.
PIN	Reader verifies users via User ID only.
PW	Reader verifies users via password only.
RF	Reader verifies users via RFID card only.
FP / PW	Reader verifies users either via fingerprint or password.
FP / RF	Reader verifies users either via fingerprint or RFID card.
PW / RF	Reader verifies users either via password or RFID card.
PIN & FP	Reader verifies users via 1:1 fingerprint matching only.
FP & PW	Reader verifies users via fingerprint with password only.
FP & RF	Reader verifies users via fingerprint with RFID card only.
PW & RF	Reader verifies users via password with RFID card only.
FP & PW & RF	Reader verifies users via fingerprint + password + RFID card.
PIN & FP & PW	Reader verifies users via User ID + fingerprint + password.
FP & RF / PIN	Reader verifies users either via fingerprint + RFID card or 1:1 fingerprint matching.

There are 5 groups available that their verification combinations could be configured. Every user is assigned into a group and he shall follow the verification methods chosen for the group. Please make sure that users chosen for a particular group have been enrolled properly to enable them to get verified. Use management software to configure and to assign users into a group. Please refer to management software manual for more details.

4 • ACCESS OPTIONS

BRIEF INTRODUCTION TO ACCESS OPTIONS

Access option function setting is the settings of user's accessibility to certain doors. It is known as Time Zone. A combination of time zones is known as Group Time Zone. There are a total of 50 time zones available in FingerTec® R2 model. Below are some examples of Time Zone configurations and combinations of Time Zones.

Time zone	SUN	MON	TUE	WED	THU	FRI	SAT
1	09:00-18:00	09:00-18:00	09:00-18:00	09:00-18:00	09:00-18:00	09:00-18:00	09:00-18:00

Table 1.1 Time Zone 1

Time Zone 1: Constant access time for a period of one week

Table 1.1 is showing the time zone 1 detailed schedule where users are only allowed access from 9am to 6pm from Monday to Sunday.

Time zone	SUN	MON	TUE	WED	THU	FRI	SAT
2	09:00-18:00	09:00-18:00	09:00-18:00	09:00-18:00	09:00-18:00	09:00-18:00	09:00-18:00
3	09:00-18:00	09:00-18:00	09:00-18:00	09:00-18:00	09:00-18:00	09:00-18:00	09:00-18:00

Table 1.2 Time Zones 2 & 3

Time Zone 2: Variation in access for a period of one week

Table 1.2 is showing the time zone 2 where users are allowed to access from 8am to 12pm from Monday to Friday but denied any access on the weekends.

Time Zone 3: Variation in access for a period of one week

Table 1.2 also is showing the time zone 3 where users are allowed to access from 2pm to 6pm from Monday to Friday but denied any access on the weekends.

The Time Zone 2 and Time Zone 3 belongs to the same group of employee, therefore they can be grouped together in Group Time Zone, for example Group Time Zone 1.

There are a total of 5 Group Time Zones available for use.

Every new registered user belongs to Time Zone 1. Default grouping combination is Group 1 and default Group Time Zone 1.

Group time zone	Time zones		
1	2	3	
2			
3			
4			
5			

Table 1.3 Group Time Zones

Under a condition where Group 1 and Time Zone 1 are in factory default status, new registered user defaults in unlocking status. If the grouping of that user does not include in grouping combination setting, then user can only record time attendance but cannot unlock the door.


“Access Options” has 5 main functions:

Access Options ▲ ▸ Define TP User Acc Opts GRP TZ Define

Access Options ▲ GRP TP Define Access Comb Lock 254
--

Define TP	To define time zones unit in Access Option.
User Acc Opts	To process correlative setting according to user's requirement.
GRP TP Define	To define group time zones, a group can support up to 3 different time zones.
Access Comb	To define different Time Zone combinations, and each combination is composed of different groups.
Lock	To control time to open electronic lock. The value 250 represents [5 sec], 200 [4 sec], 150 [3 sec], 100 [2 sec] and 50 [1 sec].

VERIFICATION FLOW OF ACCESS OPTIONS

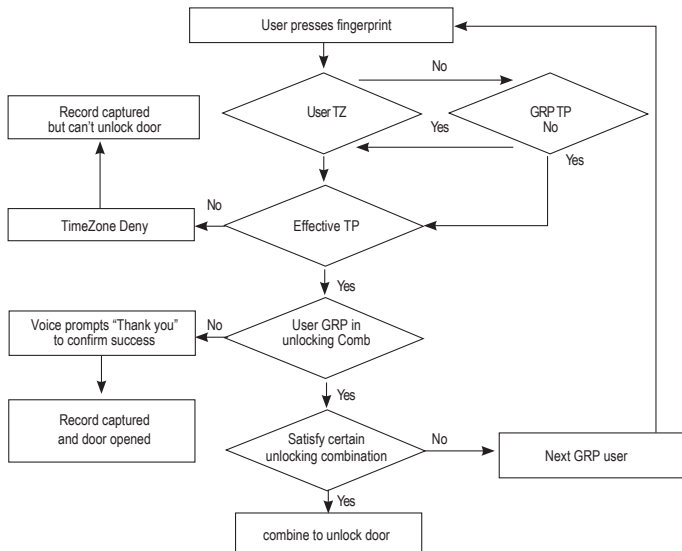

If a user verifies his fingerprint and he is the user assigned in the time zone, the system will check whether the user is included in the user group of unlocking combination. If yes, he has to satisfy certain unlocking combination for the door to be unlocked. If he does not satisfy the unlocking combination required, he will be denied access and he needs to be verified again.

If the user is in the time zone but not included in the effective time zone, he will be denied entry but the data of his fingerprint will be recorded as data for time & attendance.

If the user is included in the time zone but not included in the user group for unlocking combination, the user's data will only be recorded as time & attendance data and he will be denied access.

FUNCTION DESCRIPTION DEFINITION OF TIME ZONE

Time Zone	Range of time specified for access options. The system can define a maximum of 50 time zones. Each user can set a maximum of 3 time zones.
Time Region	A certain period of time with a format of HH:MM - HH:MM, operates in 24 hours format and accurate to the minutes. For each time zone, 7 time regions can be set.

- **Enter “Define TZ” and screen displays as follows:**

Press “OK” to enter settings of time zone 1 and the screen will display as follow:

Define TZ ▲ ▶ Time Zone No ESC OK	Def Time Zone 1 ▲ Sun 00:00-23:59 Mon 00:00-23:59 Tue 00:00-23:59	Def Time Zone 1 ▲ Tue 00:00-23:59 Wed 00:00-23:59 Thu 00:00-23:59	Def Time Zone 1 ▲ Thu 00:00-23:59 Fri 00:00-23:59 Sat 00:00-23:59
--	--	--	--

Definition of time zone 1 above is all-day open, i.e. factory default status.

- **For example:**

Users are allowed to access from 08:30-18:00 during work time from Monday to Friday. Saturdays and Sundays are off day in which the users are not allowed any entry.

Users are allowed to redefine the time zones depending to their practical requirements.

Def Time Zone 1 ▲ Sun 23:59-00:00 Mon 08:30-18:00 Tue 08:30-18:00	Def Time Zone 1 ▲ Tue 08:30-18:00 Wed 08:30-18:00 Thu 08:30-18:00	Def Time Zone 1 ▲ Thu 08:30-18:00 Fri 08:30-18:00 Sat 23:59-00:00
--	--	--

DEFINITION OF GROUPING FUNCTION

Grouping function can segregate users into group and combine different groups into different unlocking combinations. The function provides convenience to grouping management of Access Options. The grouping function can combine as many unlocking combinations as possible from the five groups. New registered user default belongs to Group 1 but the users in Group 1 can be relocated into another group.

- Enter “GRP 1 TZ Define” and screen displays as follows:

GRP TZ Define ▲	GRP1 Dflt TZ ▲
Group No.	TZ 1
1	1
ESC	TZ 2
OK	8
	TZ 3
	40

There are 3 time zones in GRP TZ Define. Relationship amongst these 3 time zones is “OR”. Group 1 is effective in time zone 1, 8 and 40.

Press OK to enter

- Enter “GRP 2 Dflt TZ” and screen displays as follows:

GRP TZ Define ▲	GRP1 Dflt TZ ▲
Group No.	TZ 1
2	1
ESC	TZ 2
OK	8
	TZ 3
	40

Setting of time zone of group 2:

From the diagram shown above, Group 2 is effective in time zone 2, 10 and 38.

Press OK to enter

USER ACCESS OPTIONS

User Access Options is to process correlative setting according to user's requirements.

- Enter Access Options menu to check user's Access Options status.

User Access Options include user grouping setting, use group time zone and user time zone

Grouping	divides registered users into several groups making it manageable.
Use group time zone	is whether the user uses default time zone of the belonged group.
User time zone	is for user to set user's unlocking time, and select number of time zone already being set.

Note

Relationships between Use Group Time Zone and User Time Zone **Yes** and **No** in “Use Group Time Zone” only have impact on the following user time zone:

- If **use group time zone** is “**Yes**”, then user time zone will automatically be assigned the value of serial number of time zone of belonged group (group time zone should be set in advance).
- If **User Time Zone** is changed, then **use group time zone** automatically be changed to “**No**”.

• Example of settings:

The following example is to set user 00001 and 00002 to group 1 and group 2, respectively.

- * Enter setting interface of serial number 00001, and screen displays as the following:

Press “OK” to enter setting menu of use group time zone. Press “▲” and “▼” keys and select “Yes”. The screen will display as the followings:

User Acc Opts ▲	User 00001 Opt ▲	User 00001 Opt ▲
Enroll ID: 00001	Belong to GRP 2	TZ 1 1
ESC OK	Use GRP TZs No	TZ 2 40
	TZ 1 1	TZ 3 48

User of serial number 00001:

User’s belonged grouping is “1”, it uses time zone of group 1 (serial number of user time zone is serial number of group time zone).

• User 00001 is effective in time zone1, 8 and 48.

- * Enter setting the interface of serial number 00002, and screen will display as the followings:
Press OK to enter.

If serial number of user time zone is 1 or 20, then use group time zone automatically change to “No”.

User Acc Opts ▲	User 00002 Opt ▲	User 00002 Opt ▲
Enroll ID: 00002	Belong to GRP 2	TZ 1 1
ESC OK	Use GRP TZs No	TZ 2 20
	TZ 1 1	TZ 3

User of serial number 00002:

The user belongs to Group 2, he does not belong to any Group Time Zone but his effective time zones are 1 and 20.

When he wants to use group time zone, select "Yes". In user time zone, serial number of group time zone will be automatically assigned the value if serial number of group time zone. In contrary, if a user wants to use user time zone, just directly modify the serial number in user time zone and use group time zone will automatically change to "No".

ACCESS COMB

In order to allow user to use different time zone groups, please set the followings accordingly:

- Comb1 value set to 1
- Comb2 value set to 2
- Comb3 value set to 3
- Comb4 value set to 4
- Comb5 value set to 5

Access Options	▲
▶ DSen Delay	10
DSen Mode	NC
DSen Alarm	

DSEN. DELAY (Door sensor delay)

DSen. Delay can be configured to alert users if a door is not closing well after a time period and the input is in second format. Door sensor must be installed prior to activation of this option.

Access Options	▲
DSen Delay	10
▶ DSen Mode	NC
DSen Alarm	

DSEN. MODE (Door sensor mode)

DSen Mode to configure the time for internal buzzer to alert user if door is not closing well. You must install door sensor to activate this option.

Access Options	▲
DSen Delay	10
DSen Mode	NC
▶ DSen Alarm	

DSEN. ALARM (Door sensor alarm)

DSen. Alarm can be configured to alert users if a door is not closing well after a time period.

DURESS OPTIONS

The FingerTec® M2/R2 will trigger the alarm system after a duress fingerprint is verified successfully.

MANAGEMENT OF DURESS FINGERPRINT

Duress FP ▲ ▶ New Enrollment Def. Duress FP Undef Duress FP	Duress FP ▲ New Enrollment ▶ Def. Duress FP Undef Duress FP	Duress FP ▲ New Enrollment Def. Duress FP ▶ Undef Duress FP	Duress FP ▲ Def. Duress FP Undef Duress FP ▶ Undef. All
--	--	--	--

Enrollment of Duress Finger	Allow enrollment of new fingerprint as duress fingerprints. Procedure for enrolling duress fingerprint is the same as normal enrollment.
Define Duress Finger	Define fingerprints to become duress fingerprint. User could use the same fingerprint for normal activity to become duress fingerprints. Recommended to define backup finger as duress finger. Note Do not use duress finger to clock in or out. Duress finger is only used in M2/R2 to send signal to alarm system.
Undefined Duress Finger	To delete duress fingerprint. User is still able to use the particular fingerprint to clock in and out.
Delete all	To delete all duress fingerprints in the reader.

Duress Options ▲	
Duress FP	
▶ Help Key	Y
1:1 Trug	N

Help Key

You may choose to change the Help Key to "Yes". Please hold down "▼" key for 3 seconds followed by the duress fingerprints verification. Success in duress fingerprint verification could trigger the alarm system.

Trigger Method

Duress Options	▲
Duress FP	
Help Key	N
▶ 1:1 Trlg	Y

Duress Options	▲
Duress FP	N
1:1 Trlg	N
▶ 1:N Trlg	Y

Duress Options	▲
1:1 Trlg	N
1:N Trlg	N
▶ Pwd Trlg	Y

There are 3 types of trigger method, which are:

1:1 Trigger	To trigger alarm by using 1:1 fingerprint verification. Use 1:N matching or password verification during normal operation to avoid conflict.
1:N Trigger	To trigger alarm by using 1:N fingerprint verification. Use 1:1 matching or password verification during normal operation to avoid conflict.
Password Trigger	To trigger alarm by using password verification. Use fingerprint verification during normal operation to avoid conflict.

You may choose only one method or all methods.

Duress Options	▲
1:1 Trlg	N
Pwd Trlg	N
▶ Alarm Delay	10

Alarm Delay

The timer could be configured to set off the alarm after successful verification on fingerprint. The time range is from 0 to 255 seconds.

FingerTec® M2/R2 models are provided with output for alarm system. Two types of signal could be used:

- **NO (Normally Open)**
- **NC (Normally Close)**

Consult your installer for more details. Email to support@fingertec.com for more information.

5 • THE OTHER FUNCTIONS

PEN DRIVE MANAGEMENT

- PenDrive Mng ▾
 - ▶ DwnLoad AttLog
 - DwnLoad User
 - UpLoad User

If M2/R2 is installed far from a PC or encountering cabling problem that is causing disruption of data download, user can transfer data via USB flash disk (Pen Drive). The functions in the USB Flash disk include:

DwnLoad AttLog	to download transaction logs into USB flash disk and transfer into TCMS V2.
DwnLoad User	to download users into USB flash disk and transfer into TCMS V2.
Upload User	to copy users from TCMS V2 and transfer to reader.
Upload Firmware	to update the firmware version of reader. You need to get the firmware update file from your resellers and copy into USB flash disk.

SYSTEM OPTION

- Options ▾
 - ▶ System Opt
 - Power Mng
 - Comm Opt

System option enables user to configure the following areas:

- Date & Time Setting
- Date & Time Format
- Languages
- Advance Options

Reset Opts	to restore all settings back to original factory settings
Del Attlogs	to clear all attendance log stored in reader
Clear all Data	to clear all user data (i.e user name, ID number)
Clr Admin Pri	to clear administrator's privilege
Show Score	to show the quality of image captured during verification, the maximum is 50
Match Thr	to configure sensitivity of the optical sensor for 1:N matching
1:1 Thr	to configure sensitivity of optical sensor for 1:1 matching

COMMUNICATION OPTION

- Options ▾
 - System Opt
 - Power Mng
 - Comm Opt

This is to configure communication settings of M2/R2 readers. User can choose the type of communication [TCP/IP, RS232 or RS485]. Improper settings will cause connection to computer to fail.

Those options are:

Baud rate	to adjust baud rate of connection with RS232 or RS485
Dev num	the number of reader in an installed environment
IP Addr	to configure the IP address of reader
Net speed	to adjust the speed connection of Ethernet
Netmask	to configure netmask to suit reader into local area network.
Gateway	to configure gateway to suit reader into local area network.
Ethernet	to enable or disable Ethernet as communication method
RS 232	to enable or disable RS232 as communication method
RS 485	to enable or disable RS485 as communication method
COMM key	communication key between reader and software, always set to "0"

LOG OPTION

- Options ▾
 - Power Mng
 - Comm Opt
 - Log Opt

If reader has capacity storage limit of a maximum 120,000 transaction logs and to ensure that all transactions are intact in the reader, user can adjust the warning level of transaction storage to for example 40,000 or 45,000. When the transaction storage reaches the warning level, reader will alert users with a beep.

Alm SuperLog	to instruct reader to alert user if the transaction storage of administrator login is less than as configured, default is 99.
Alm AttLog	to instruct reader to alert user if the transaction storage is less than as configured, default is 99.
ReCheck Min	to instruct reader to update clocking times of all user in a time interval, default is 10 minutes.

AUTO TEST

- Options ▾
- Comm Opt
- Log Opt
- ▶ Auto test

This option allows M2/R2 resellers/technician to run test to the reader to identify any error. Please do not run test without guidance/supervision from M2/R2 resellers/technicians.

SYSTEM INFO

- Options ▾
- Log Opt
- Auto test
- ▶ Sys Info

User may check the information stored in the reader under this option.

The information includes:


User Cnt	to show total of users in reader	
FP Cnt	to show total of fingerprints templates in reader	
Att Log	to show total of attendance log in reader	
Admin Cnt	to show total of administrators in reader	
Pwd Usr	to show total of password users in reader	
Super Logs	this item is used by FingerTec® technicians for testing purpose	
Free Space Inf	to show empty spaces which are available in reader	
Dev Info	FPCnt (100)	to show the number of fingerprints templates stored in reader
	AttLog (10k)	to show the amount of attendance log could bestored in reader
	Super Logs	for testing purpose
	Manu time	manufacturing time of reader
	Serial Num	serial number of reader
	Manufacturer	name of manufacturer
	Device name	name of reader
	Alg Version	to show the algorithm version use by the reader
Firmware ver	to show the firmware version use by the reader	

5 • INSTALLATION & COMMUNICATIONS


Note

This Chapter is meant for qualified installer only. The installation of FingerTec® M2/R2 reader shall be handled by a well-trained installer. If you are not a qualified installer, you can ignore this Chapter or this Chapter serves as reference for all types of connections available for the FingerTec® M2/R2 reader only.

CONNECTIONS AVAILABLE

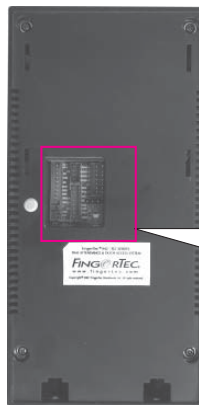

Back of Reader

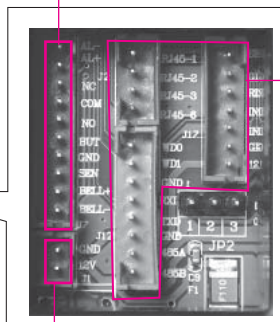

• Power Supply Connection

To provide DC12V to FingerTec® M2/R2 to operate.

• Access Control Connection

To link FingerTec® M2/R2 with door lock systems and alarm system.

• Communication Connection TCP/IP Connection

To provide TCP/IP communication to computer via LAN cable.

RS232 Connection

To provide RS232 communication to computer via RS232 cable.

RS485 Single Connection

To provide RS485 communication to computer via RS485 cable.


RS485 Network Connection

To provide RS485 communication to computer via RS485 network.

POWER SUPPLY CONNECTION



Connector Pin

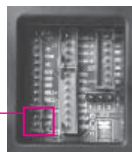

Connector Port

1. Connect 12V DC power supply to FingerTec® M2/R2 reader.
2. Turn on the power supply, the FingerTec® M2/R2 reader will start.

COMMUNICATION CONNECTION

FingerTec® M2/R2 model be connected to computer by four ways:

IP Addr	192. 168. 1.201
ESC	OK

Comm Opt	▼
▶ Ethernet	Yes
RS232	No
RS485	No


Note

When RS232/RS485/Ethernet is enabled, only the Ethernet function will be enabled while the RS232/RS485 will be disabled.


TCP/IP Connection

1. Setup the IP address by network configuration
The machine default IP address is 192.168.1.201; this is a legal and available IP address in many LAN environment. If the host IP address is 192.168.1.X and it is in the same network region, then this IP can be used directly. If not, please make sure that you have changed the IP address accordingly.
2. Setup of Ethernet.
Access Menu select "Options" > "Comm. Opt" > "Ethernet", select "Yes" to enable Ethernet function.


3. Turn the power off.
4. Plug the network plug to the Ethernet interface.
5. Turn the power on.

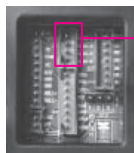

Connector Port



Connector Pin



RS232 cable



PC

Ethernet 10/100Base-T Crossover Cable



This cable can be used to cascade hubs, or for connecting two Ethernet stations back-to-back without a hub. It works with both 10Base-T and 100Base-TX.

Joint 1 Pin		Joint 2 Pin	
TX+	1	3	RX+
TX-	2	6	RX-
RX+	3	1	TX+
RX-	6	2	TX-

Ethernet 10/100Base-T Straight Thru Cable

This cable will work with both 10Base-T and 100Base-TX and is used to connect a network interface card to a hub or network outlet. These cables are sometimes called "whips".

Connector Pin	Cable Color	Connector
TX+	1 — White/Orange	1 TX+
TX-	2 — Orange	2 TX-
RX+	3 — White/Green	3 RX+
	4 — Blue	4
RX-	5 — White/Blue	5
	6 — Green	6 RX-
	7 — White/Brown	7
	8 — Brown	8

Comm Opt
 ▶ RS232 Yes
 RS485 Yes

RS232 Connection


1. Setup of RS232

Access to Menu, select "Options" > "Comm. Opt" > "RS232", select "Yes" to enable RS232 function.

Note

When RS232 function is enabled, the Ethernet will be disabled.

2. Turn off the reader.
3. Plug the RS232 cable to the RS232 port of the PC.
4. Plug the RS232 other end to the RS232 joint.
5. Turn the power on.

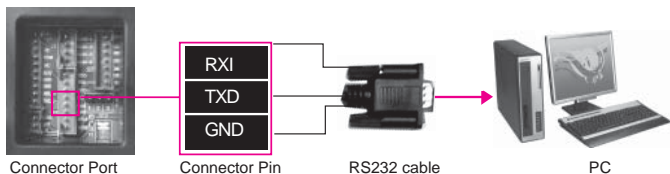

RS485 Single Connection

Comm Opt	▼
RS232	Yes
▶ RS485	Yes

1. Setup of RS485

Access Menu, select "Options" > "Comm. Opt" > "RS485", select "Yes" to enable RS485 function.


2. Turn off the reader.
3. Plug the RS485 cable extender to the connector. Connect another end of the cable to the RS232/485 data converter.
4. Connect the RS485 data converter to the RS232 port of PC.
5. Turn the power on.

Note

When RS485 function is enabled, the Ethernet will be disabled.

Note

The RS232/485 converter is an optional component.

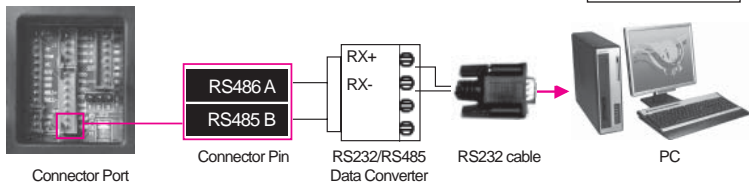

RS485 Network Connection

Comm Opt	▼
RS232	Yes
▶ RS485	Yes

1. Setup of RS485

Access Menu, select "Options" > "Comm. Opt" > "RS485", select "Yes" to enable RS485 function.


Note

When the RS485 function is enabled, the Ethernet will be disabled.

- Turn off the reader.
- Plug the RS485 cable extender to the RS232/485 port on the Power Controller, and another end of the cable to the RS232/485 network.

4. Connect computer to the RS485 network with the RS232/485 converter.


5. Turn the power on.

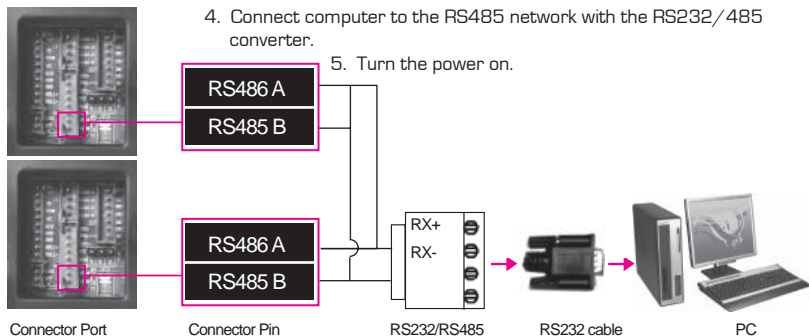


Wiegand 26-bit Input & Output

FingerTec® model M2/R2 are preset with Wiegand 26-bit Input and Output format, which enables integration with 3rd party controller for a complete access control system of preference.

3rd party controller with Wiegand 26-bit Input:

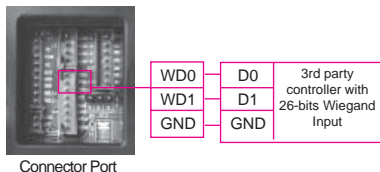

3rd party controller with Wiegand 26-bit Output:

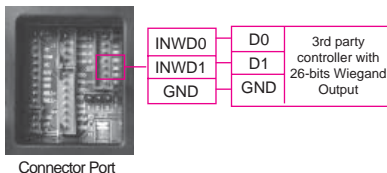


DOOR LOCK CONNECTION


All door lock accessories are linked to the connector pins at the back of FingerTec® model M2 /R2. Please read carefully before you start to connect door accessories to the FingerTec® M2/R2.

FingerTec® M2/R2 output an EM output (DC12V) to control door lock system. Attention: M2 /R2 do not act as dry contacts for independent door lock system; it needs power supply to control them.

For NC (normally closed) door lock system:

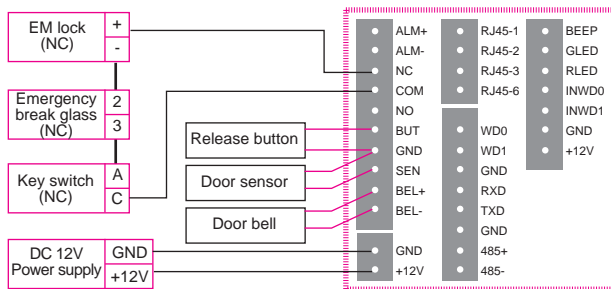

For NO (normally open) door lock system:

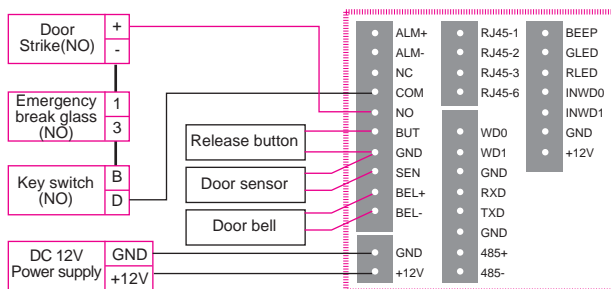

Note

Please refer to AdapTec AC Installer Manual if you are using AdapTec AC with FingerTec® model M2/R2.

1 Where is the ON/OFF button for FingerTec® M2/R2?

The FingerTec® M2/R2 models are not equipped with any ON/OFF button. Once the power supply is turned on, the reader will be turned on and if the power supply is turned off, the reader follows.

2 I cannot connect the FingerTec® reader to the PC. Every time I try, the software prompts “Unable to connect” message. What should I do?

Please check communication settings in Menu > Option > Comm. Opt. Please see more details in page 46, Connection to Computer.

3 The FingerTec® reader has difficulty recognizing my fingerprint. It takes many tries before I am verified. What should I do?

Please make sure that your finger is not too oily or too dirty because the oil and dirt will cover the minutiae points of the fingerprints, thus making reading difficult. Make sure the FingerTec® reader is not facing direct sunlight because it will disturb the reading of the sensor. To deal with light interference, cover the reading area when you want to verify your fingerprint. If this occurred often, kindly ask for re-registration.

4 Alarm goes off every time when I place finger on the sensor. Why did such thing occur and what should I do?

The finger you used was defined as a duress finger. Once a duress finger is verified, it will trigger the FingerTec® reader to activate the alarm. To undefine your finger as a duress finger, follow these steps: Menu > Option > Access options > Duress Option > Duress FP > Undef Duress FP > Enter your user ID

5 When the FingerTec® reader is turned on, the red LED is blinking all the time. Is there any problem with the reader?

There is nothing wrong with the FingerTec® reader.

The red LED blinks to indicate FingerTec® reader is on standby. When a fingerprint is verified, the LED will turn green to indicate successful verification.

6 The FingerTec® reader is accidentally turned off by a staff. Would we lose all the transaction data and fingerprints in that FingerTec® reader?

All transaction data and fingerprints in the FingerTec® reader is safe in the event of power shutdown because all the information is stored in the memory of the reader. This information can only be deleted via software or it can be manually purged in Advance option.

7 The door sensor is connected to the FingerTec® reader. How could I activate the door sensor function?

You can activate the door sensor option by following these steps: Menu > Option > Access option > Dsen Mode > NC/NO. To configure the timer of the door sensor: Menu > Option > Access Option > Dsen Delay > Enter value

8 I did not want to use the door sensor with FingerTec® reader but when I removed the door sensor, the FingerTec® reader was triggered and the alarm went off. What should I do to completely remove the door sensor?

You must disable the door sensor option in FingerTec® reader by following these steps: Menu > Option > Access Option > Dsen mode > NONE

9 During enrollment I heard “duplicate finger”. Why was that?

The “duplicate finger” voice message is to alert user if the enrolling finger is found to have existed in the FingerTec® reader. User must use other finger to enroll.

10 I waved my RFID card to a FingerTec® reader but it did not respond. What could be the reason?

Please make sure that your RFID card is registered to the FingerTec® reader, before you use it. Please also make sure that your user ID is assigned into the verification group that supports RFID card.